Self Diagnosis Supported model

SERVICE MANUAL

BG-3S CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-TF21M80	RM-952	India	SCC-U22J-A				

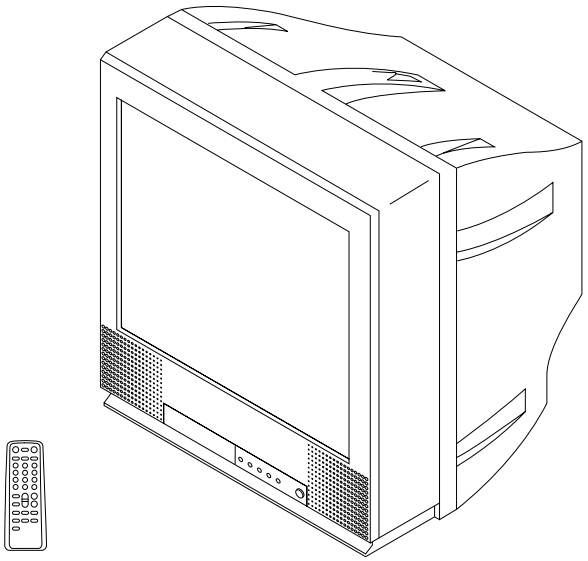

MICROFILM

TRINITRON ® COLOR TV

SONY ®

http://cxema.ru

KV-TF21M80
RM-952

SPECIFICATIONS

		Note
Power requirements	110-240V AC, 50/60Hz	
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G, I, D/K, M	
Color system	PAL, PAL60, SECAM, NTSC4.43, NTSC3.58	
Channel coverage		
B/G	VHF : E2 to E12/ UHF : E21 to E69 CATV : S01 to S03, S1 to S41	
I	UHF : B21 to B68/ CATV : S01 to S03, S1 to S41	
D/K	VHF : C1 to C12, R1 to R12/ UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39	
M	VHF : A2 to A13/ UHF : A14 to A79/ CATV : A-8 to A-2, A to W+4, W+6 to W+84	
(Antenna)	75-ohm external terminal	
Audio output	3W + 3W	
Number of terminal		
(Video)	Input : 2 Output : 1 Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input : 2 Output : 1 Phono jacks; 500 mVrms	
(Headphone)	Output : 1 Minijack	
Picture tube	21 inch	
Tube size (cm)	54	Measured diagonally
Screen size (cm)	51	Measured diagonally
Dimension (w/h/d, mm)	490 x 458 x 487	
Mass (kg)	25	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

http://cxema.ru

TABLE OF CONTENTS

Section	Title	Page
	SELF DIAGNOSIS FUNCTION	4
1.	**GENERAL**	8
2.	**DISASSEMBLY**	
2-1.	Rear Cover Removal	20
2-2.	Chassis Assy Removal	20
2-3.	F Bracket Removal	20
2-4.	Service Position	20
2-5.	Replacement of Parts	21
2-5-1.	Replacement of Control Button	21
2-5-2.	Replacement of Bar Control	21
2-6.	Terminal Bracket Removal	21
2-7.	Degauss Coil Removal	21
2-8.	Picture Tube Removal	22
3.	**SET-UP ADJUSTMENTS**	
3-1.	Beam Landing	23
3-2.	Convergence	24
3-3.	Focus Adjustment	26
3-4.	G2 (Screen) and White Balance Adjustments	26
4.	**CIRCUIT ADJUSTMENTS**	
4-1.	Adjustments with Commander	27
4-2.	Adjustment Method	28
4-3.	Picture Quality Adjustments	33
4-4.	A Board Adjustment After IC003 (Memory) Replacement	33
4-5.	Picture Distortion Adjustment	34
5.	**DIAGRAMS**	
5-1	Block Diagram	37
5-2	Frame Schematic Diagram	40
5-3	Circuit Boards Location	42
5-4	Schematic Diagrams and Printed Wiring Boards	42
(1)	Schematic Diagram of A(1/2) Board	43
(2)	Scheamtic Diagram of A(2/2) Board	47
(3)	Schematic Diagrams of C3 and F Boards	55
5-5	Semiconductors	59
6.	**EXPLODED VIEWS**	
6-1.	Chassis	61
7.	**ELECTRICAL PARTS LIST**	63

http://cxema.ru

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F Board)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) or overvoltage (OVP) • Vertical deflection stopped • Horizontal deflection overdrive	2 times	002:000 or 002:001~255 003:001~255 004:001~255 at the same time	• H.OUT Q511 is shorted. (A board) • IC1800 is shorted. (C3 Board). • -13V is not supplied. (A board) • IC 503 faulty (A board) • IC 301 faulty (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~225	• G2 is improperly adjusted. (Note 2) • CRT problem. • Video OUT IC701 is faulty. (C3 board) • IC301 is faulty. (A board) • No connection A board to C3 board.	• No raster is generated. • CRT cathode current detection reference pulse output is small.
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C3 Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.
The symptom that is diagnosed first by the microcontroller is displayed on the screen.
Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

http://cxema.ru

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

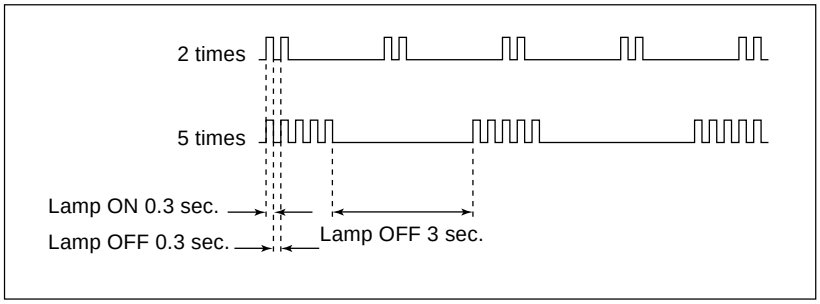

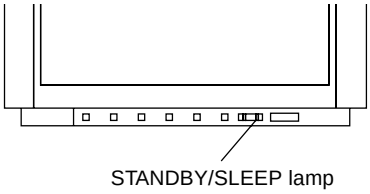

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage Vertical deflection stopped	2 times
White balance failure	5 times

* One flash count is not used for self-diagnostic.

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

http://cxema.ru

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]
In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display ➡ channel 5 ➡ Sound volume - ➡ Power ON
⇧
Note that this differs from entering the service mode (mode volume +).

Self-Diagnosis screen display

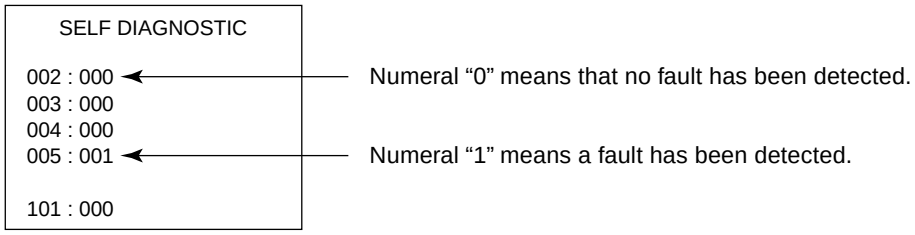
SELF DIAGNOSTIC
002 : 000
003 : 000
004 : 000
005 : 001
101 : 000
Numeral “0” means that no fault has been detected.
Numeral “1” means a fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]
To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel 8 ➡ 0

[Quitting Self-diagnostic screen]
To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

http://cxema.ru

6. SELF-DIAGNOSTIC CIRCUIT

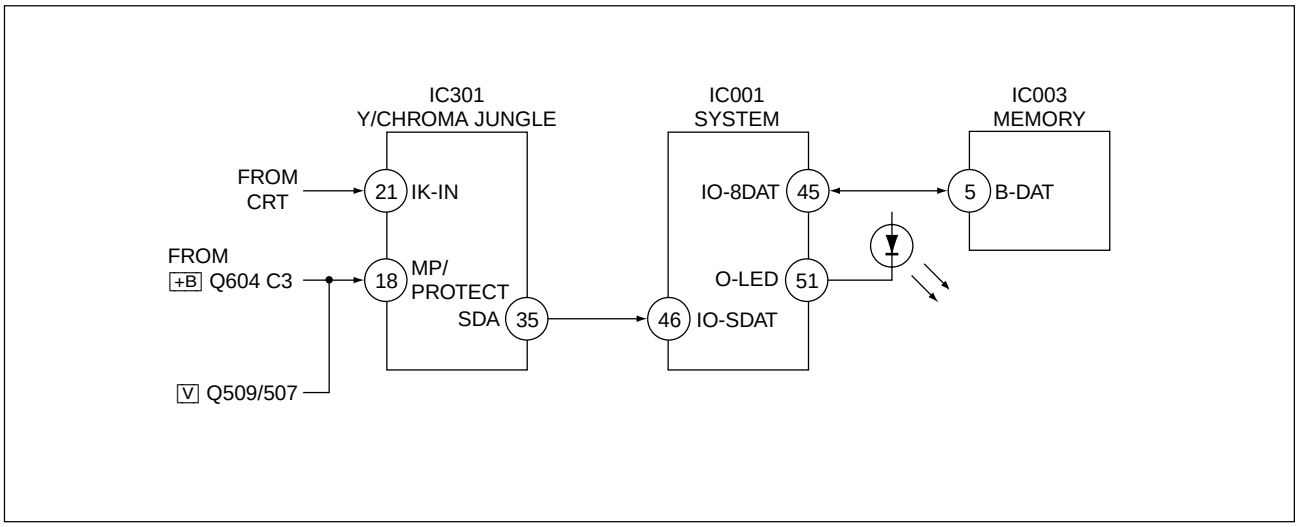

+B overcurrent (OCP)	Occurs when an overcurrent on the +B(135) line is detected by Q604. If Q604 go to ON and the voltage to pin 18 of IC301 should go down when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
Vertical deflection stopped	Occurs when an absence of the vertical deflection pulse is detected by Q509 and IC001 shut down the power supply.
Vertical deflection overcurrent	Occurs when an overcurrent on V drive line is detected by Q507. Power supply will be shut down when detect this by IC001.
White balance failure	If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture. * (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

http://cxema.ru

http://cxema.ru

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1
GENERAL

WARNING

- Dangerously high voltages are present inside the TV.
- Operate the TV only between 110 – 240 V AC.

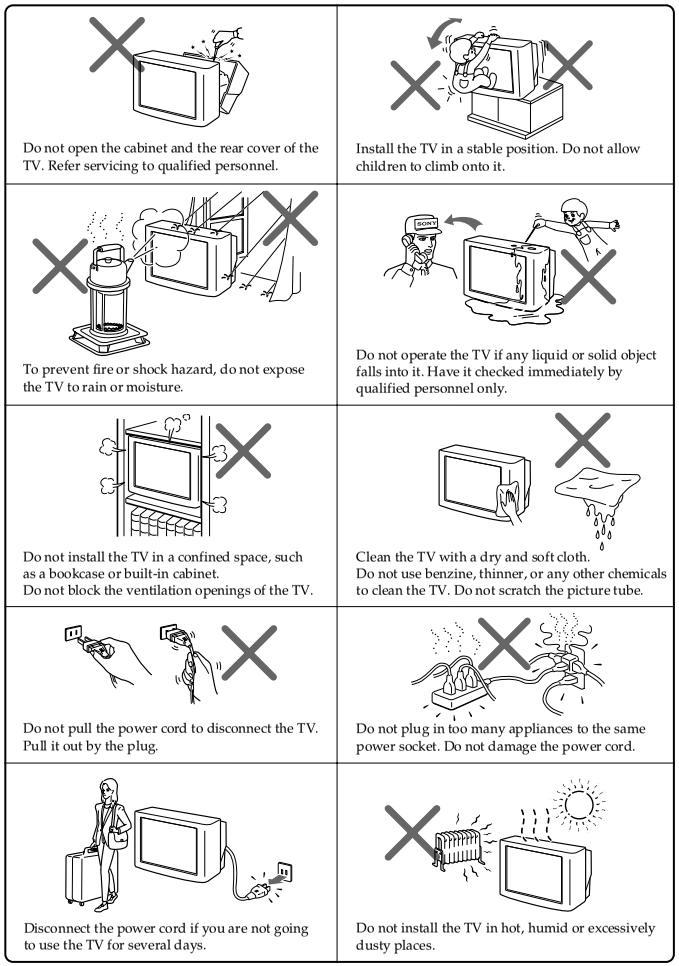

Do not open the cabinet and the rear cover of the TV. Refer servicing to qualified personnel.

Install the TV in a stable position. Do not allow children to climb onto it.

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

Do not install the TV in a confined space, such as a bookcase or built-in cabinet.
Do not block the ventilation openings of the TV.

Clean the TV with a dry and soft cloth.
Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.

Do not pull the power cord to disconnect the TV. Pull it out by the plug.

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

Disconnect the power cord if you are not going to use the TV for several days.

Do not install the TV in hot, humid or excessively dusty places.

Getting Started

Step 1

Connect the antenna

If you wish to connect a VCR, see the "Connecting a VCR" diagram below.

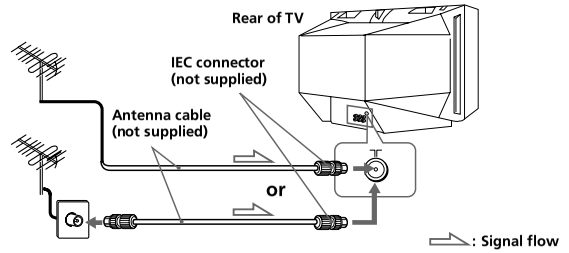

Connecting a VCR

To watch the video, press (see page 13).

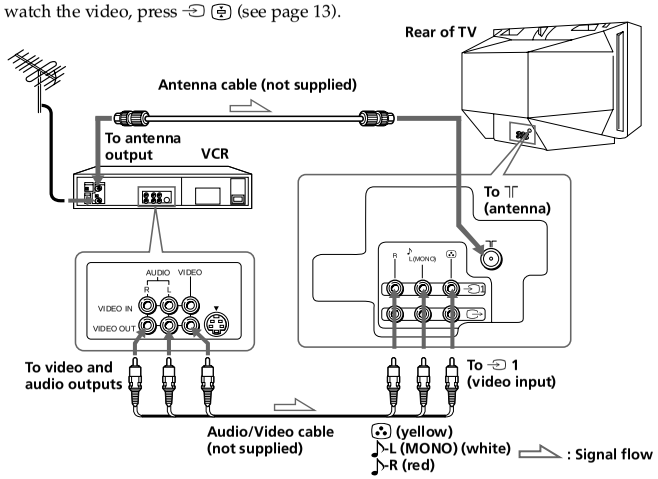

http://cxema.ru

Notes

- If you connect a monaural VCR, connect the yellow plug to (the yellow jack) and the black plug to L (MONO) (the white jack).
- If you connect a VCR to the (antenna) terminal, preset the signal output from the VCR to the program number 0 on the TV.
- When no signal is input to the connected video equipment, the TV screen becomes blue.

CAUTION

Do not connect the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.

Step 2

Insert the batteries into the remote



Note

- Do not use old batteries nor use different types of batteries together.

Step 3

Preset the channels automatically

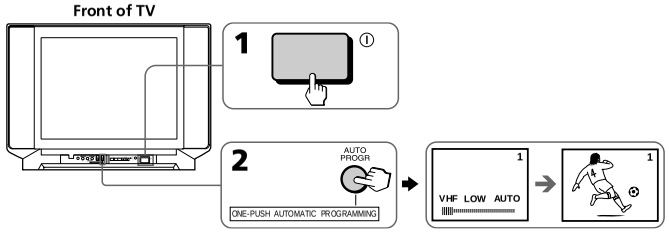

Tips

- If you want to stop automatic channel presetting, press SELECT twice.
- If your TV has preset an unwanted channel or cannot preset a particular channel, then preset your TV manually (see page 10).

Note (KV-HF14M80/TF21M80/XF21M83/XF21M80 only)

- During automatic channel presetting, your TV screen will indicate "B/G" , "I", "D/K" or "M" for the TV system.

Now You Are Ready. . .

To watch your TV, see page 12.

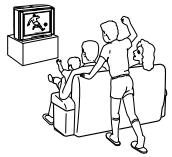

Connecting the 3D WOOFER

(KV-XF21M83/XF21M93 only)

You can enjoy high quality sound by connecting the 3D WOOFER.

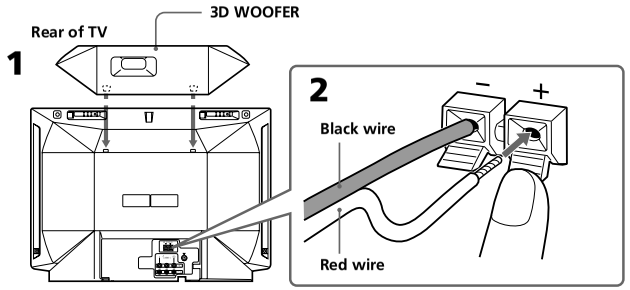

1 Attach the 3D WOOFER into the footholds on the top of your TV.

2 Connect the wires to the 3D WOOFER (8 Ω) terminals at the rear of your TV. The red wire should be connected to the ⊕ red terminal and the black wire to the ⊖ black terminal.

Notes

- Connect only the supplied 3D WOOFER; otherwise your TV may malfunction.
- Unplug your TV from the wall outlet when connecting the 3D WOOFER.
- To prevent a malfunction caused by a short circuit of the terminals, make sure that none of the 3D WOOFER wire strands stick out, making contact with the neighbouring speaker terminal.

http://cxema.ru

Connecting optional components

You can connect optional audio/video components, such as a VCR, multi disc player, camcorder, video game or stereo system.

To watch the picture of the connected equipment, press (see page 13).

Connecting a camcorder/video game equipment using the (video input) jacks

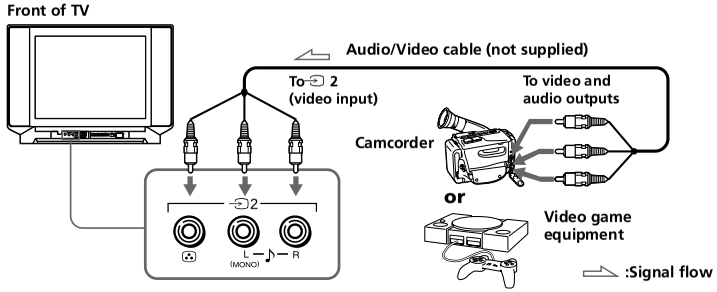

Note

- You can also connect video equipment to the 1 (video input) jacks at the rear of your TV.

Connecting audio/video equipment using the (monitor output) jacks

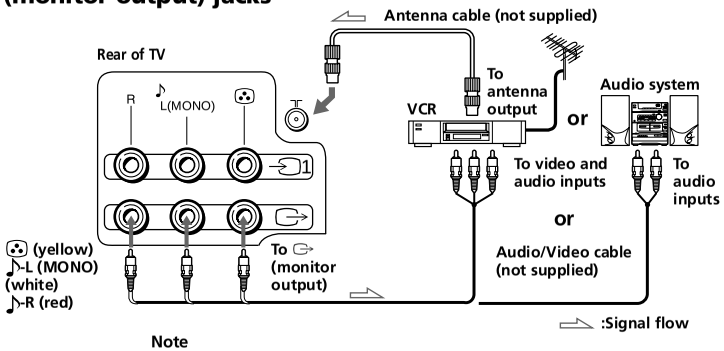

Note

- When connecting a monaural VCR, connect the yellow plug to (the yellow jack) and the black plug to -L (MONO) (the white jack).

Securing the TV

To prevent the TV from falling, secure the TV using one of the following methods:

A With the supplied screws, attach the band to the TV stand and to the rear of the TV using the provided hole.

or

B Put the cord or chain through the clamps to secure the TV against a wall or pillar.

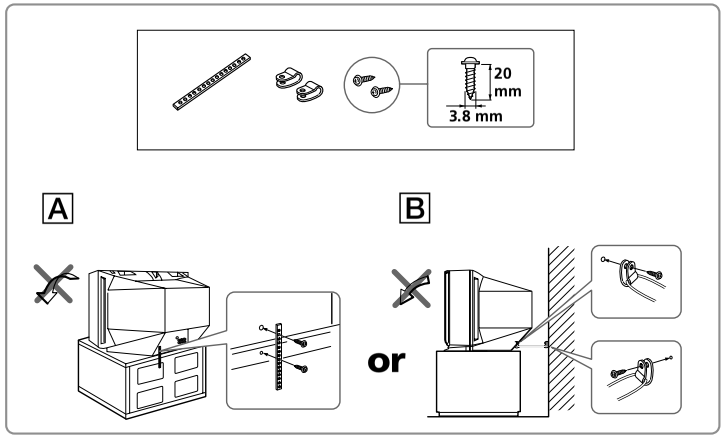

Note

- Use only the supplied screws. Use of other screws may damage the TV.

http://cxema.ru

Presetting channels

You can preset up to 100 TV channels in numerical sequence from program number 1 using the remote and the buttons on your TV as well.

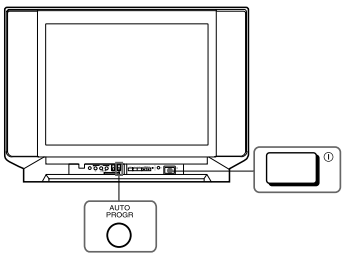

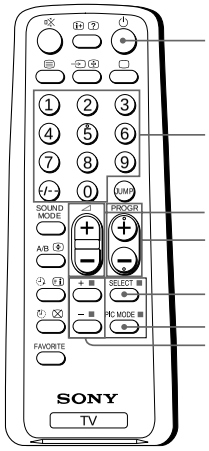

Presetting channels automatically

1 Press ⏻ to turn on the TV.

2 Press AUTO PROGR.

Note (KV-HF14M80/TF21M80/XF21M83/XF21M80 only)
- During automatic channel presetting, your TV screen will indicate "B/G" , "I", "D/K" or "M" for the TV system.

To preset channels automatically from a specified program number

(1) Press SELECT until "AUTO PROGRAM" appears.

(2) Press + or –.
The on-screen display will start flashing.

(3) Press PROGR +/– or the number buttons until the desired program number appears.

(4) Press + or –.

continued

Presetting channels (continued)

Presetting channels manually

1 Press SELECT until "MANUAL PROGRAM" appears.

2 Press + or –.

3 Press PROGR +/– or the number buttons until the desired program number appears.

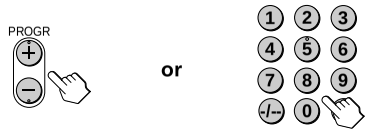

4 Press + or – until the desired channel picture appears.

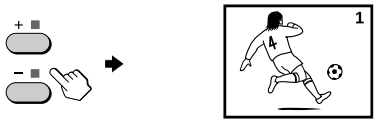

5 Press SELECT.

To change the TV system setting

If the picture or sound is abnormal when receiving programs through the ⅂ (antenna) terminal

(1) Press SELECT until "TV SYS" appears.



(2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.



http://cxema.ru

To change the color system setting

If the color is abnormal when receiving programs through the ⊤ (antenna) terminal or the ⇨ (video input) jack

(1) Press SELECT until "COL SYS" appears.

COL SYS: AUTO

(2) Press + or – to select the appropriate color system until the color is optimal.

AUTO → PAL → SECAM → NTSC 3.58 → NTSC 4.43 →

Tip

- Normally set "COL SYS" to "AUTO".

Skipping program numbers

1 Press PROGR +/– or the number buttons until the unused or unwanted program number appears.

2 Press SELECT until "MANUAL PROGRAM" appears.

3 Press + or –.

4 Press PIC MODE.

5 Press SELECT.

To preset the skipped program number again

Preset the channel automatically or manually.

Tip

- You can also use SELECT and ◿ +/– on the TV to preset channels and skip program numbers.

To use the fine tuning (FINE) function

The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

(1) Select the program number you want to adjust.
(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
(3) Press + or – on the remote control once.
(4) Press i ? to display "FINE" on the screen.
(5) Press + or – continuously until the above problems are minimized.
The + or – icon on the screen flashes while tuning.
(6) Press SELECT to return to normal screen.

Watching the TV

This section explains functions used while watching the TV. Most operations can be done using the remote.

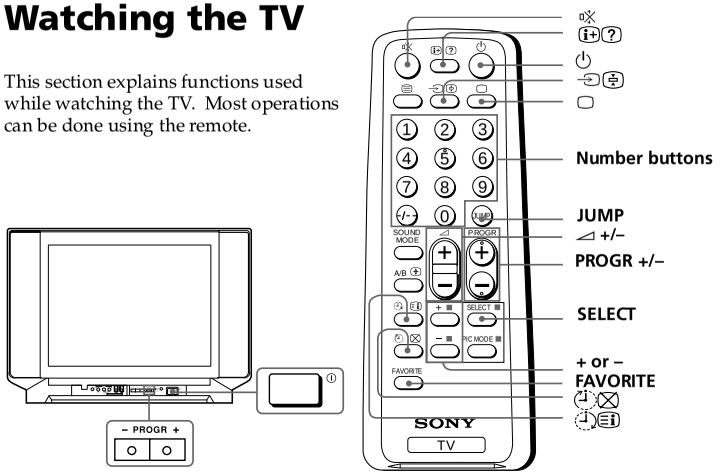

1 Press ⏻ to turn on the TV.

When the TV is in the standby mode (the ⏻ indicator on the TV is lit red), press ⏻ on the remote or PROGR +/– on the TV.

2 Press PROGR +/– or the number buttons to select the TV program.

For double digit numbers, press -/--, then the number (e.g., for 25, press -/--, then 2 and 5).

or



3 Press ◿ +/– to adjust the volume.

http://cxema.ru

Additional tasks

To	Do this
Turn off temporarily	Press ⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	Press ⏻ on the TV.
Mute the sound	Press 🔇.
Watch the video input (VCR, camcorder, etc.)	Press INPUT to select "VIDEO 1" or "VIDEO 2". To return to the TV program, press 📺.
Jump back to the previous channel	Press JUMP.
Display the on-screen information*	Press DISPLAY.
Adjust the volume of all TV programs automatically	Press SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or – to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen (KV-XF21M93/XF21M83/XF21M80 only)	Press SELECT repeatedly until "PIC ROTATION" appears, then press + or – to adjust the alignment of the picture position. The ↴ or ↳ icon on the screen flashes while adjusting.

* The picture, sound, and either the program number or video mode are displayed. The on-screen display for the picture and sound information disappears after about 3 seconds.

Changing the on-screen display language

1 Press SELECT until "LANGUAGE / اللغة: ENGLISH"appears on the screen.



2 Press + or – to select " عربي ".

Tip

- You can also use SELECT and +/– on the TV to select the on-screen display language.

continued

Setting the Wake Up timer

1 Press 🕘 until the desired period of time appears.

The Wake Up timer starts immediately after you have set it.

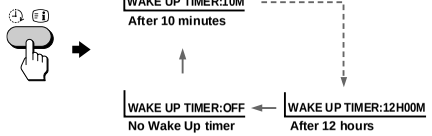

2 Select the TV program or video mode you want to display when you wake up.

3 Press ⏻ or set the Sleep timer if you want the TV to turn off automatically.

The 🕘 indicator on the TV lights up orange.

To cancel the Wake Up timer

Press 🕘 until "WAKE UP TIMER: OFF" appears or turn off the TV's main power.

Note

- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into the standby mode. To continue watching the TV, press any button or control on the TV or the remote.

Setting the Sleep timer

Press 🕘 until the desired period of time appears.

The Sleep timer starts immediately after you have set it.

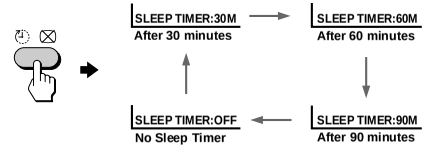

To cancel the Sleep timer

Press 🕘 until "SLEEP TIMER: OFF" appears or turn the TV off.

http://cxema.ru

Customizing the picture and sound

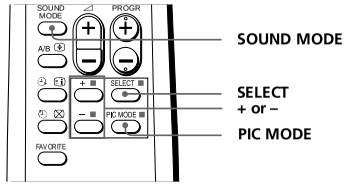

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the surround mode.

Selecting the picture and sound modes

To select the picture mode

Press PIC MODE repeatedly until you get the desired picture mode.



Select	To
DYNAMIC	receive high contrast pictures.
STANDARD	receive normal contrast pictures.
SOFT	receive mild pictures.

To select the sound mode

Press SOUND MODE repeatedly until you get the desired sound mode.

Select	To
DYNAMIC	listen to dynamic and clear sound that emphasizes the low and high sound.
DRAMA	listen to sound that emphasizes vocals and background music.
SOFT	receive soft sound.

continued

Adjusting the picture and sound settings

1 Press SELECT until the desired setting appears.

Each time you press SELECT, the setting item will change as follows:



2 Press + or – to adjust the item.

3 To adjust other items, repeat steps 1 to 2.

* "HUE" can be adjusted for the NTSC system only.

Notes

- When you select a picture or sound mode, the adjusted settings will be reset according to the selected mode.
- You can also use SELECT and ◿ +/– on the TV to adjust the picture and sound settings.

Selecting the surround mode

1 Press SELECT repeatedly until "SURROUND" appears.

2 Press + or – to select the desired surround sound.

Select	To
MOVIE	listen to sound that spreads out over a large area, giving the feeling of being at a movie theatre.
MUSIC	listen to the sound that gives the feeling of being at a live concert.
OFF	turn off the surround sound.

http://cxema.ru

Viewing your favorite channels

You can display six of your favorite channels for quick and easy selection. You can change the favorite channel setting as well.

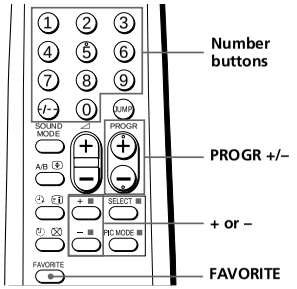

Selecting a favorite channel

1 Press FAVORITE.



2 Press the number button from 1 to 6 to select the desired channel.

When you use the FAVORITE CH feature for the first time, six preset channels will appear.



Changing the favorite channel setting

1 Press SELECT until "FAVORITE CH SET UP" appears.





2 Press + or – to select the favorite channel you want to change (e.g. ③ PR03).





3 Press PROGR +/–, or number buttons to change the program number.





4 Repeat steps 2 and 3 to set other favorite channels.

5 Press SELECT.

Blocking the channels (CHILD LOCK)

You can prevent a child from watching certain channels by using the buttons on the remote control.

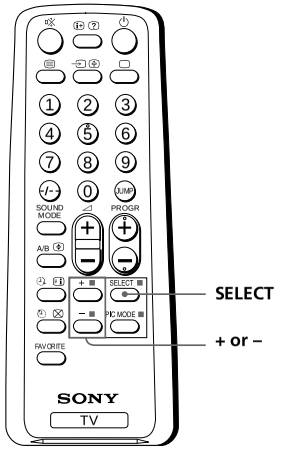

1 Select the channel you want to lock.

2 Press SELECT until "CHILD LOCK" appears on the screen.





3 Press + or – to select "ON".

The 🔒 symbol appears on the screen.

To unlock the channel, press + or – to select "OFF". The 🔒 symbol disappears from the screen.



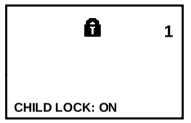

Note

- If you preset a locked channel, that particular channel will be unlocked automatically.

KV-TF21M80
RM-952

http://cxema.ru

Selecting a stereo or bilingual program

(KV-XF21M93 only)

You can enjoy stereo sound or bilingual programs of NICAM and A2 (German) stereo systems.

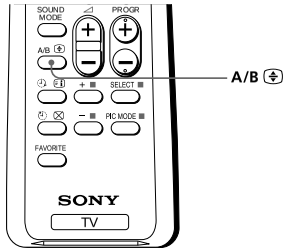

Press A/B repeatedly until you receive the sound you want.

The on-screen display changes to show the selected sound and the indicator on the TV lights up red.

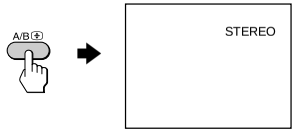

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

continued

When receiving an A2 (German) program

Broadcasting	On-screen display (Selected sound)
A2 (German) stereo	MONO (Regular sound) → STEREO (Stereo sound)
A2 (German) bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the signal is very weak, the sound becomes monaural automatically.
- If the stereo sound is noisy when receiving a NICAM program, select "MONO". The sound becomes monaural, but the noise is reduced.

If the sound is distorted or noisy when receiving a monaural program through the ⅂ (antenna) terminal

Press A/B repeatedly until "MONO" appears on the screen.

To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

MONO → AUTO

Notes

- The "MONO" or "AUTO" setting is memorized for each program position.
- You cannot receive stereo broadcast signal when the TV is in the "MONO" setting. Normally set the TV to "AUTO".

http://cxema.ru

Self-diagnosis function

Your TV is equipped with a self-diagnosis function. If there is a problem with your TV, the ⏻ indicator flashes red. The number of times the ⏻ indicator flashes indicates the possible causes.

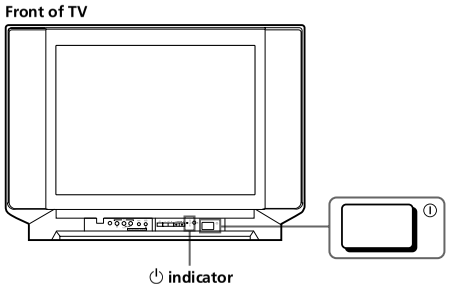

1 Check that the ⏻ indicator flashes red a number of times between 3-second intervals.

2 Count the number of times the ⏻ indicator flashes.

3 Press ⏻ (main power) to turn off your TV.

4 Inform your nearest Sony service center about the number of times the ⏻ indicator flashes.
Be sure to note the model name and serial number located on the rear of your TV.

Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer .

Symptom	Solutions	Possible cause
Snowy picture	• Check the antenna cable and connection on the TV, VCR and on the wall. (page 4)	• Connection is loose or the cable is damaged.
	• Press SELECT until "MANUAL PROGRAM" appears on the screen then preset the channel again. (page 10)	• Channel presetting is inappropriate or incomplete.
Noisy sound	• Check the antenna type (VHF/UHF). Contact a Sony dealer for advice.	• The antenna type is inappropriate.
	• Adjust the antenna direction. Contact a Sony dealer for advice.	• The antenna direction is inappropriate.
	• Try using a booster.	• Signal transmission is low.
Distorted picture Noisy sound	• Turn off or disconnect the booster if it is in use.	• Broadcast signals are too strong.
Good picture Noisy sound	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting (page 10), then press AUTO PROGR to preset the channels again (page 9). • If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS). (page 10)	• The TV system setting or channel presetting is inappropriate or incomplete.
	• If the sound of some channels are noisy, select the channel, then press A/B ⏻ to select the main sound. (KV-XF21M93 only) (page 19)	• The selected sound is inappropriate.
No picture No sound	• Check the power cord, antenna and the VCR connections.	• The power cord, antenna or VCR is not connected.
	• Press ⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	• The TV is not turned on.

http://cxema.ru

Symptom	Solutions	Possible cause
Good picture	• Press + to increase the volume level.	• The volume level is too low.
	• Press to cancel the muting.	• The sound is muted.
No sound	• Press A/B until a better sound is heard. (KV-XF21M93 only) (page 19)	• Broadcast signal has a transmission problem.
Dotted lines or stripes 	• Do not use a hair dryer or other equipment near the TV. • Adjust the antenna direction for minimum interference. Contact a Sony dealer for advice.	• There is local interference from cars, neon signs, hair dryers, power generators, etc.
Double images or "ghosts"	• Use a highly directional antenna. • Use the fine tuning (FINE) function. (page 11)	• Broadcast signals are reflected by nearby mountains or buildings.
	• Adjust the antenna direction. Contact a Sony dealer for advice.	• The antenna direction is inapproprite.
	• Turn off or disconnect the booster if it is in use.	• Use of a booster is inappropriate.
No color	• Press SELECT until "COLOR" appears on the screen, then press + or – to adjust the color level. (page 16)	• The color level setting is too low.
	• Press SELECT until "COL SYS " appears on the screen, then check the color system setting (usually set this to "AUTO"). (page 11).	• The color system setting is inappropriate.
	• Adjust the antenna direction. Contact a Sony dealer for advice.	• The antenna direction is inapproriate.
Abnormal color patches	• Keep external speakers or other electrical equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about five minutes, then turn it on again.	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.
TV cannot receive stereo broadcast signal (KV-XF21M93 only)	• Press A/B until "AUTO" appears on the screen. (page 19)	• The stereo reception setting is inappropriate.

continued

Troubleshooting (continued)

Symptom	Solutions	Possible cause
Stereo broadcast sound switches on and off or is distorted. **or** The sound switches between monaural and stereo frequently. (KV-XF21M93 only)	• Check the antenna cable and connection on the TV, VCR and on the wall. (page 4)	• Connection is loose or the cable is damaged.
	• Adjust the antenna direction. Contact a Sony dealer for advice.	• The antenna direction is inappropriate.
	• Press A/B until a better sound is heard. (page 19)	• Broadcast signal has a transmission problem.
Picture slant	• Keep external speakers or other electrical equipment away from the TV. • Press SELECT until "PIC ROTATION" appears on the screen, then press + or – to align the picture to the TV screen. (page 13)	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.
Lines moving across the TV screen.	• Use the fine tuning (FINE) function. (page 11)	• There is interference from external sources, e.g., heavy machineries, nearby broadcast station.
The ⏻ indicator on your TV flashes red a number of times between 3-second intervals.	• Contact your nearest Sony service center. (page 21)	• Your TV may need service.
TV cabinet creaks.	—	• Changes in room temperature sometimes make the TV cabinet expand or contact, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	—	• The TV's demagnetizing function is working. This does not indicate a malfunction.

http://cxema.ru

Identifying parts and controls

Refer to the pages indicated in parentheses ( ) for details.

Front panel

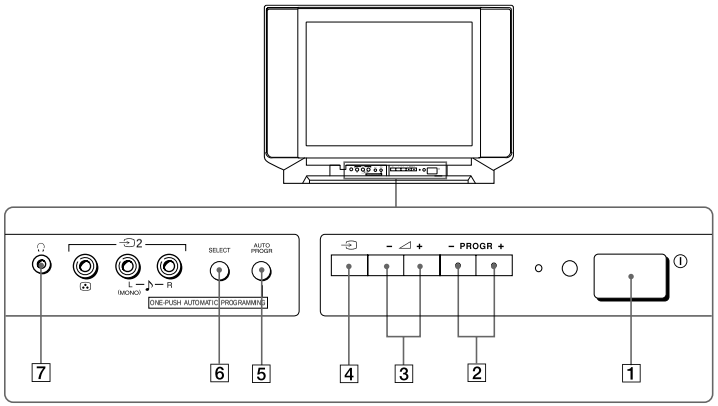

1 ⏻ (main power) button (12)
2 PROGR +/– (program) buttons (12)
3 +/– (volume) buttons (12)
4 (TV/video) button (13)
5 AUTO PROGR (program) button (5)
6 SELECT button (10)
7 (headphone) jack

Remote Control

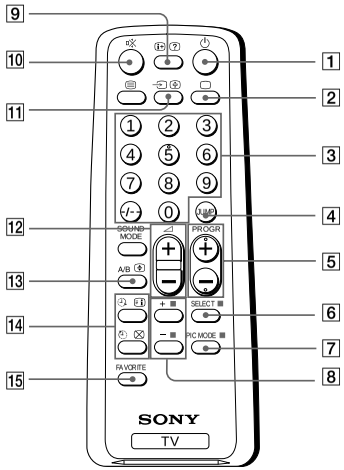

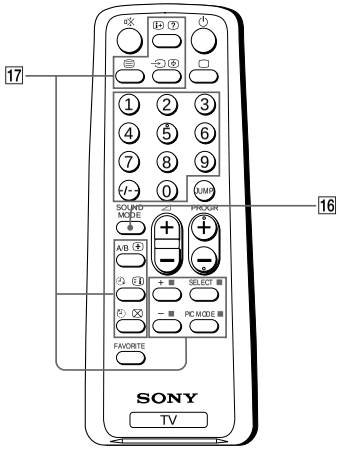

1 ⏻ (power) button (12)
2 (TV) button (13)
3 Number buttons (12)
4 JUMP button (13)
5 PROGR +/– buttons (12)
6 SELECT button (10)
7 PIC MODE button (15)
8 +/– buttons (10)
9 (display) button (13)
10 (muting) button (13)
11 (video) button (13)
12 +/– (volume) buttons (12)
13 A/B button (19)
(KV-XF21M93 only)
14 Timer setting buttons (14)
(wake up timer)
(sleep timer)
15 FAVORITE button (17)

16 SOUND MODE button (15)
17 Teletext operation buttons
(not used for KV-HF14M80/
TF21M80/XF21M93/XF21M83/
XF21M80)
(text) (enlarge)
(reveal) (hold)
(index) (text clear)
■ (FASTEXT: red, green, yellow, blue)

Names/symbols of buttons on the remote are indicated in different colors to represent the available functions.

Label color	Button function
White	For general TV operations
Green	For Teletext operations

http://cxema.ru

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

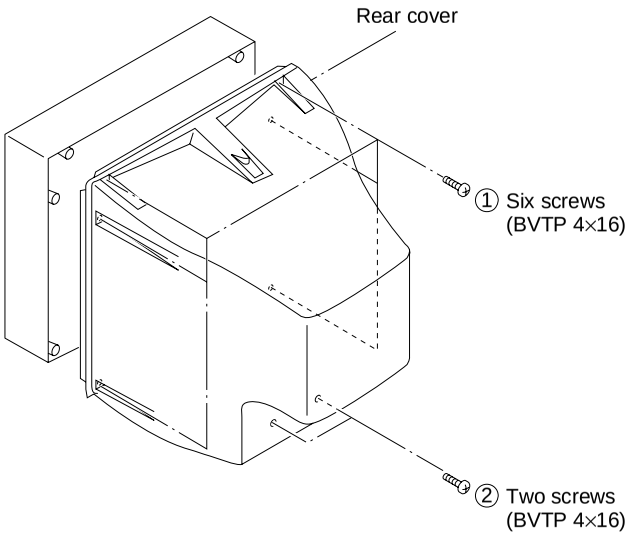

2-2. CHASSIS ASSY REMOVAL

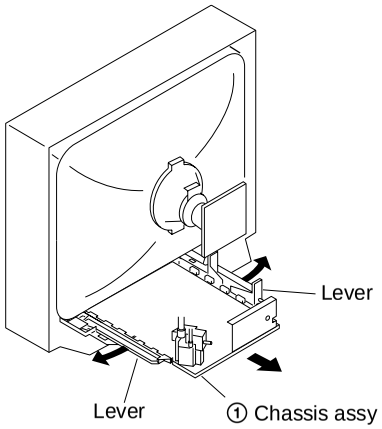

2-3. F BRACKET REMOVAL

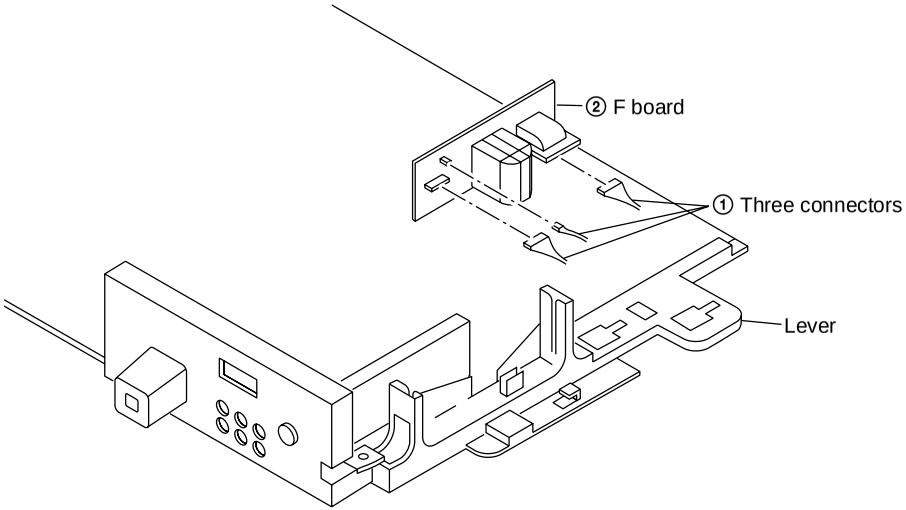

2-4. SERVICE POSITION

(Note: Remove F Bracket first.)

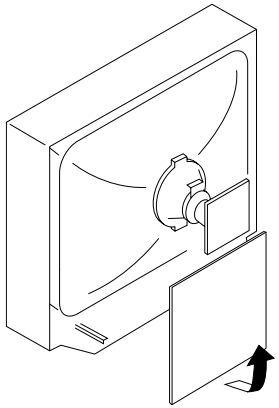

http://cxema.ru

2-5. REPLACEMENT OF PARTS

For replacement of the Multi Button and Bar Optical ,unscrew to exchange with the new parts, and fix them with screws (+BVTP) respectively.

2-5-1. REPLACEMENT OF MULTI BUTTON

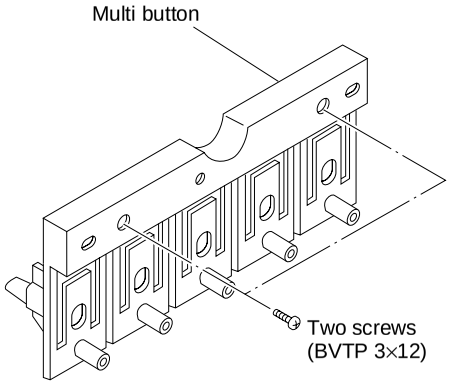

2-5-2. REPLACEMENT OF BAR OPTICAL

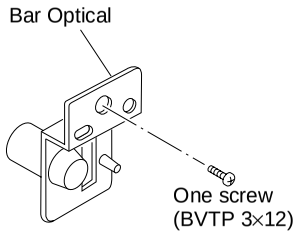

2-6. TERMINAL BRACKET REMOVAL

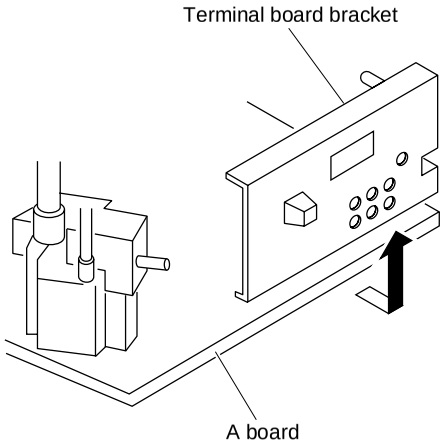

2-7. DEGAUSS COIL REMOVAL

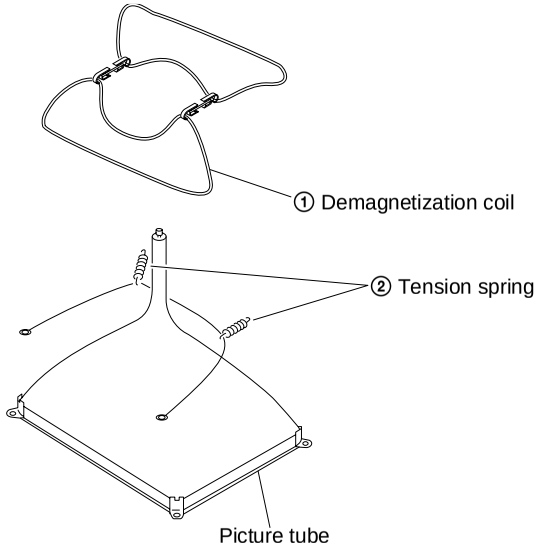

http://cxema.ru

2-8. PICTURE TUBE REMOVAL

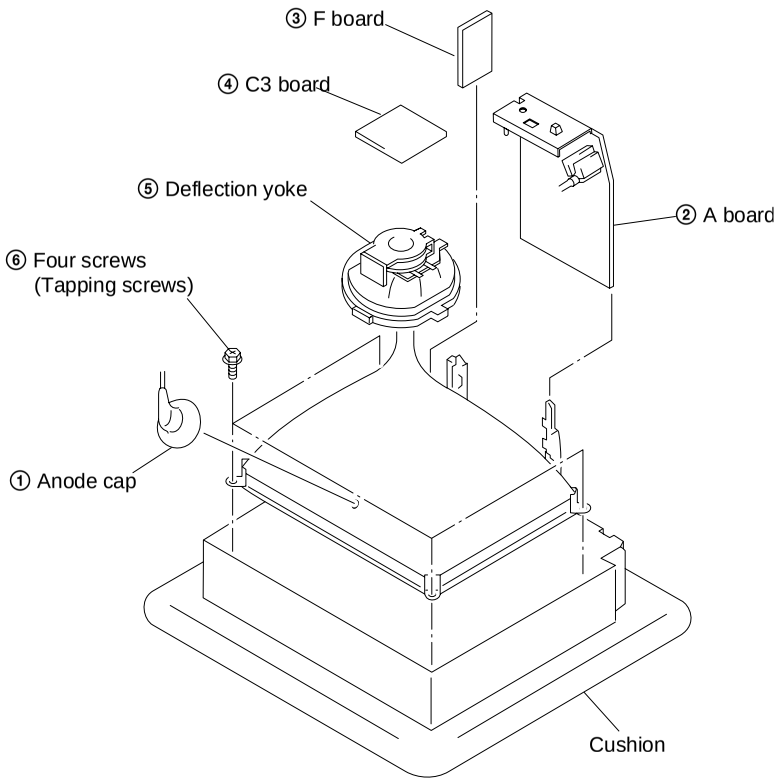

• REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

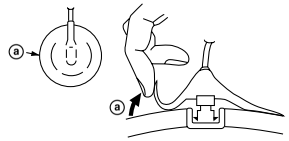

① **Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.**

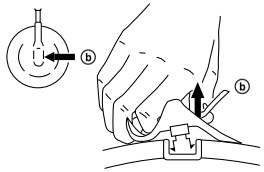

② **Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.**

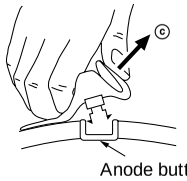

③ **When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.**

• HOW TO HANDLE AN ANODE-CAP

① **Do not damage the surface of anode-caps with sharp shaped objects.**
② **Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.**
③ **Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.**

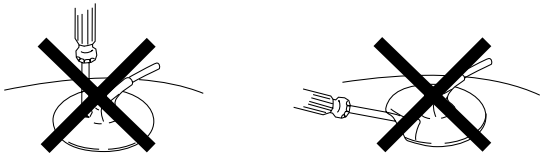

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:
PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
   (See Figures 3-1 through 3-3.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it.
   (See Figure 3-4.)

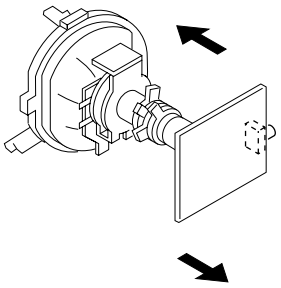

Fig. 3-1

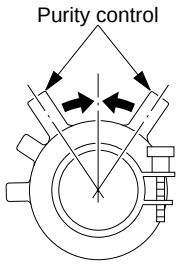

Fig. 3-2

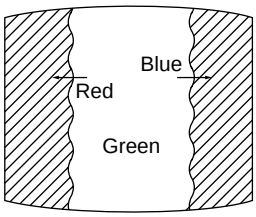

Fig. 3-3

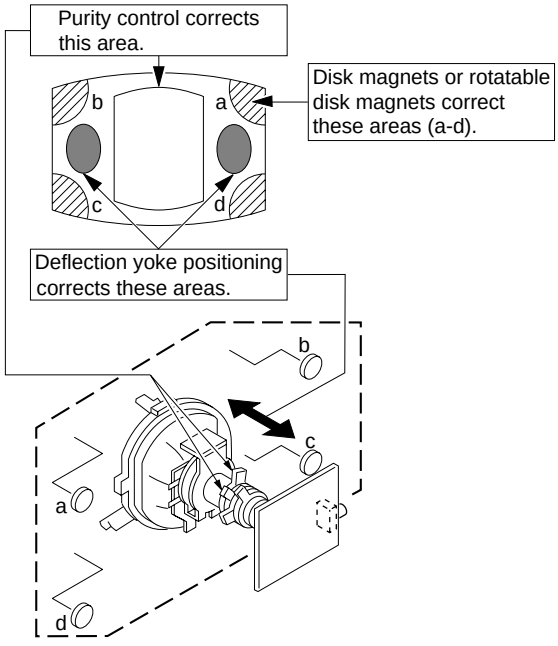

Fig. 3-4

http://cxema.ru

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and Vertical Static Convergence

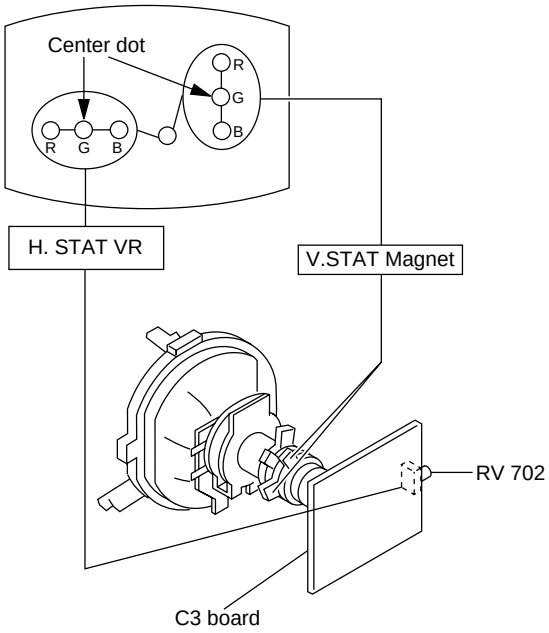

(Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.

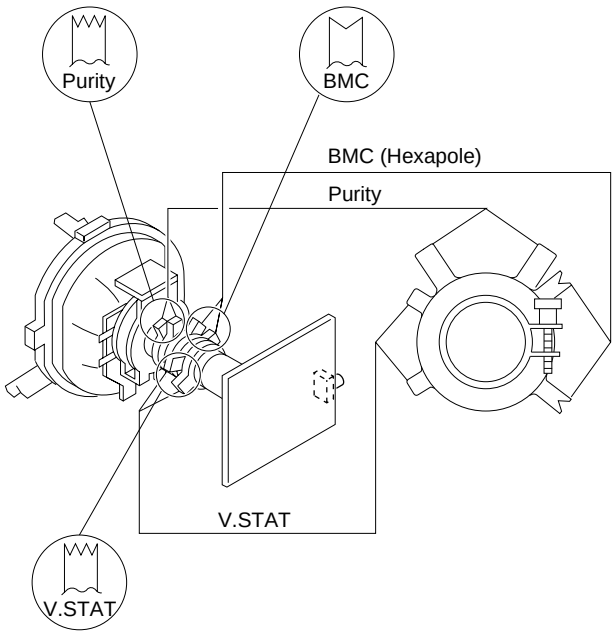

① V. STAT

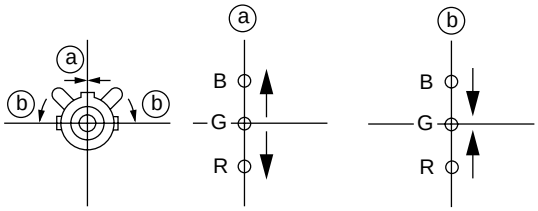

② H. STAT VR

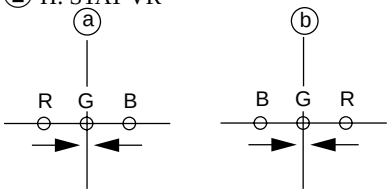

③

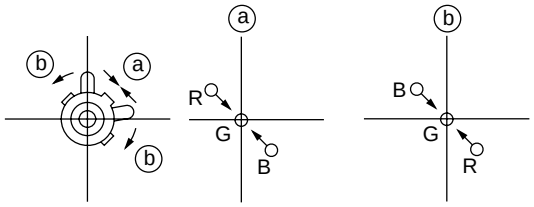

④ BMC (Hexapole) Magnet.

If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

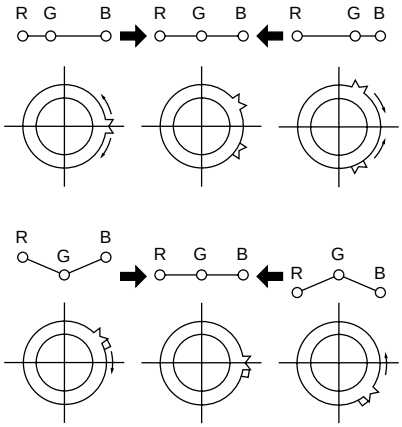

http://cxema.ru

(2) Dynamic Convergence Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

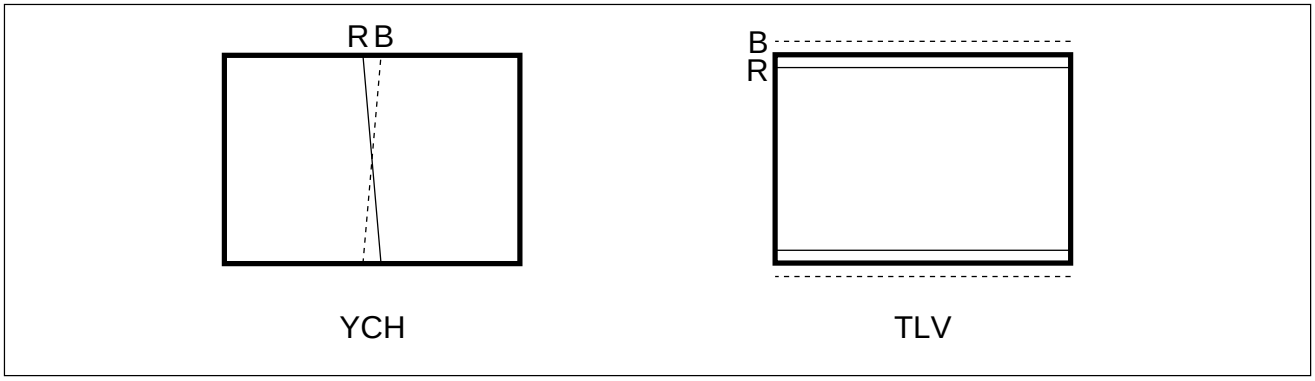

on DY

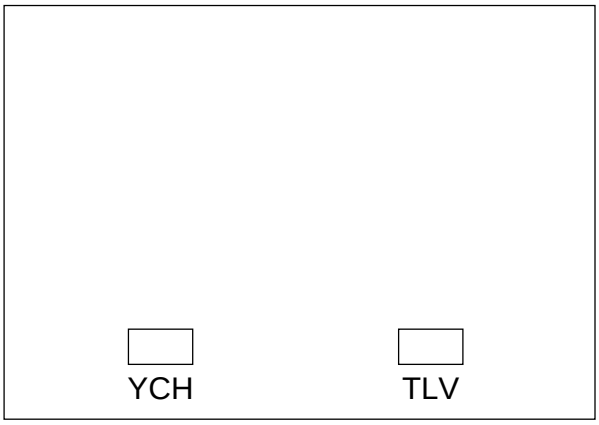

(3) Screen-corner Convergence

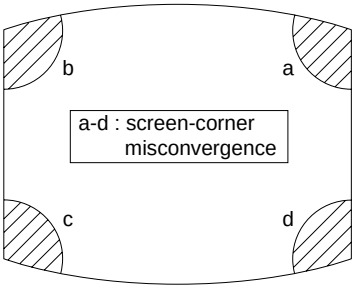

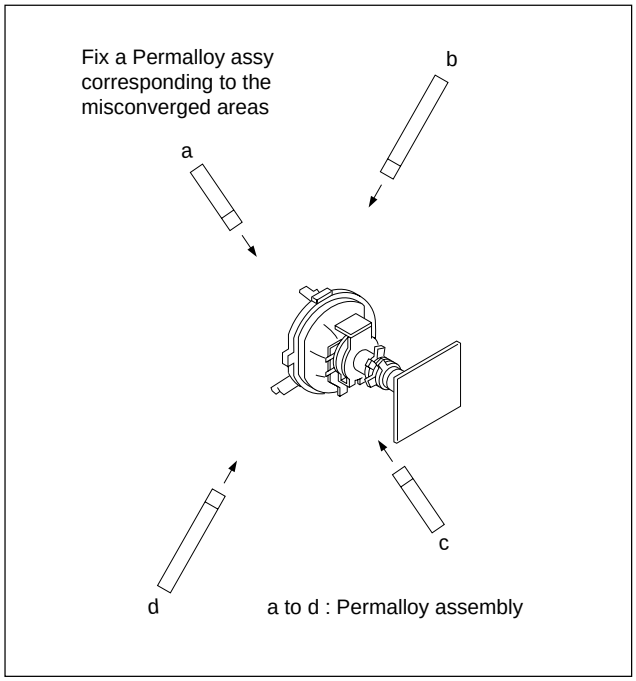

http://cxema.ru

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for the best focus.

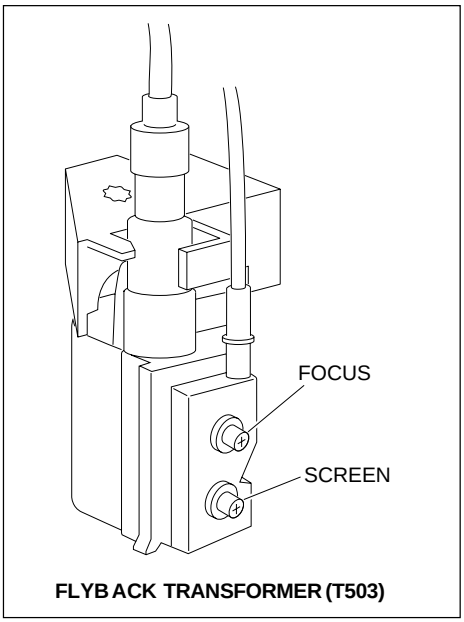

FLYBACK TRANSFORMER (T503)

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C3 board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Adjust G2 (Screen) on FBT until picture shows the point before cut-off.

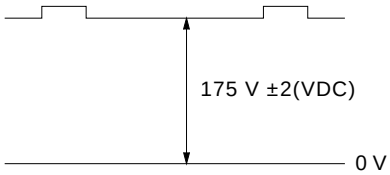

2. WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set the PICTURE to minimum.
4) Select GCT (WHB 4) and BCT (WHB 5) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
5) Set the PICTURE to maximum.
6) Select GDR (WHB 1) and BDR (WHB 2) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].

3. SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Input a staircase signal of black to white from the pattern generator.
3) BRIGHTNESS .... 50%.
   PICTURE ..... MINIMUM
4) Select SBR (WHB7) with [1] and [4], and adjust SBR (WHB7) level with [3] and [6] so that the second stripe from the right is dimly lit.

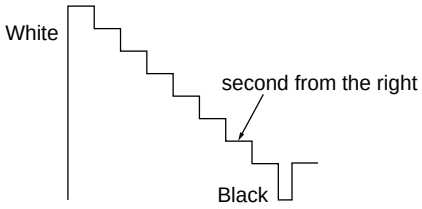

http://cxema.ru

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments are made with the RM-952 that comes with this unit.

a. ENTERING SERVICE MODE

With the unit on standby
↓
[DISPLAY]
↓
[5]
↓
[VOL (+)]
↓
[POWER]

This operation sequence puts the unit into service mode.

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press [1] (UP) and [4] (DOWN), select an item of adjustment.
3) Press [MUTING] button and it will indicate WRITE on the screen.
4) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

The screen display is :

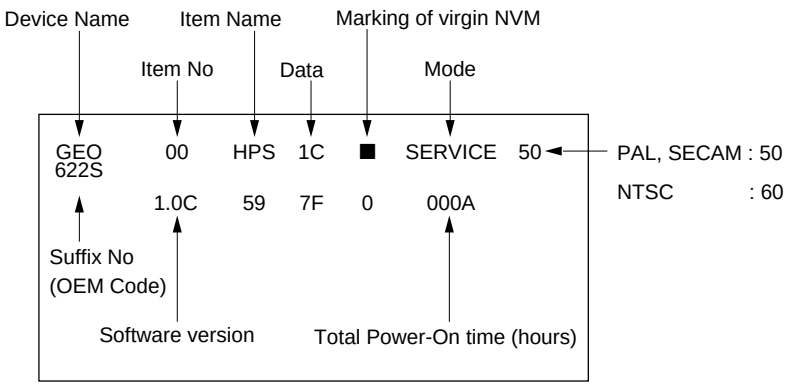

[1], [4] ↓	Select the adjustment item.
[3], [6] ↓	Raise/lower the data value.
[MUTING] ↓	Writes.
[0]	Executes the writing.

[7], [0]	All the data becomes the values in memory.
[8], [0]	All user control goes to the standard state.
[5], [0]	Service data initialization (Be sure not to use usually.)
[2], [0]	Write 50Hz adjustment data to 60Hz, or vice versa.

RM-952

http://cxema.ru

4-2. ADJUSTMENT METHOD

Item Number 00 of device GEO

This explanation uses H-Position as an example.

1. Select “GEO 00 HPS” with the 1 and 4 buttons.
2. Raise/lower the data with the 3 and 6 buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the MUTING button. (The display changes to WRITE.)
5. Execute the writing with the 0 button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

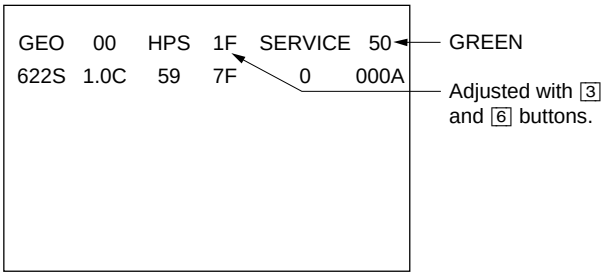

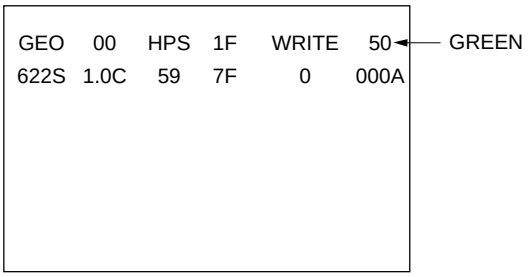

Written with MUTING

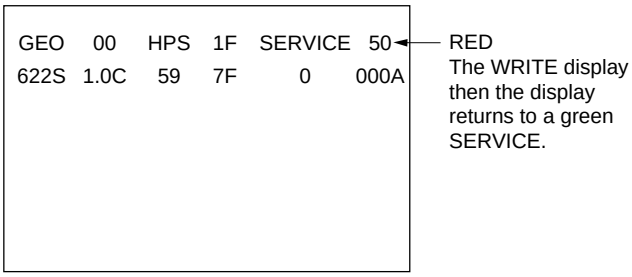

Write executed with 0

Use the same method for all Items. Use 1 and 4 to select the adjustment item, use 3 and 6 to adjust, write with MUTING, then execute the write with 0.

Note : 1. In WRITE, the data for all items are written into memory together.

2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

http://cxema.ru

http://cxema.ru

Adjustment Item Table

Device Name	Functionality No	Functionality Name	Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
GEO	0	HPS	7	3F	H Position	50/60HZ	12 (7-2)	CXA2130S(88H)	82 (7-2)
	1	HSZ	1F	3F	H Size	50/60HZ	11 (7-2)		81 (7-2)
	2	PAP	1F	3F	Pin Amp	50/60HZ	13 (7-2)		83 (7-2)
	3	TLT	7	0F	Trapezium	50/60HZ	15 (7-4)		85 (7-4)
	4	VPS	1F	3F	V Position	50/60HZ	0F (7-2)		7F (7-2)
	5	VSZ	1F	3F	V Size	50/60HZ	0E (7-2)		7E (7-2)
	6	SCO	7	0F	S Correction	50/60HZ	10 (7-4)		80 (7-4)
	7	VLN	7	0F	V Linearity	50/60HZ	10 (3-0)		80 (3-0)
	8	BOW	7	0F	AFC Bow	50/60HZ	16 (7-4)		86 (7-4)
	9	AGL	7	0F	AFC-Angle	50/60HZ	16 (3-0)		86 (3-0)
	10	UPN	1F	3F	Upper Pin	50/60HZ	14 (7-2)		84 (7-2)
	11	LPN	1F	3F	Lower Pin	50/60HZ	18 (7-2)		88 (7-2)
	12	HBL	1	1	H Blanking on/off		18 (1)		67 (1)
	13	LBL	0F	0F	Left H Blanking	50/60HZ	17 (7-4)		87 (7-4)
	14	RBL	00	0F	Right H Blanking	50/60HZ	17 (3-0)		87 (3-0)
WHB	0	RDR	25/2A	3F	R Drive	DYNAMIC/others	09 (7-2)	CXA2130S(88H)	8F (7-2)
	1	GDR	2A	3F	G Drive	DYNAMIC/others	0A (7-2)		90 (7-2)
	2	BDR	2A	3F	B Drive	DYNAMIC/others	0B (7-2)		91 (7-2)
	3	RCT	7	0F	R Cutoff	SECAM/others	07 (3-0)		93 (3-0)
	4	GCT	7	0F	G Cutoff	SECAM/others	08 (7-4)		94 (7-4)
	5	BCT	7	0F	B Cutoff	SECAM/others	08 (3-0)		94 (3-0)
	6	BMN	15	1F	Brightness Minimum Data				97
	7	SBR	28	3F	Sub Brightness Control				98
SAJ	0	PMX	36	3F	Picture Maximum Data			CXA2130S(88H)	96
	1	SHU	8	0F	Sub Hue Control	TV/Video			99
	2	SSH	07	0F	Sub Sharpness Control 03/08	TV/Video			9A
	3	SCL	1F	3F	Sub Color Control	NTSC/others			9B
VP	0	EHT	07	0F	EHT Comp	50/60HZ	15 (3-0)	CXA2130S(88H)	85 (3-0)
	1	GMA	2	03	Gamma Correction	Refer NVM Map A4	0B (1-0)		1A3 (1-0)
	2	YDL	6	0F	Y Delay	PAL/SECAM/NTSC	0C (3-0)		8C (3-0)
	3	SST	1	03	SECAM ID Start Position		1B (1-0)		6A (1-0)
	4	SSP	1	03	SECAM ID Stop Position		1B (3-2)		6A (3-2)
	5	SLV	2	03	SECAM ID Level		1C (1-0)		6B (1-0)
	6	SBF	22	3F	SECAM BELL fO		1C (7-2)		6B (7-2)
	7	DYC	0	1	Dynamic Color on/off		0A (1)		59 (1)
	8	ABL	1	1	ABL Mode Switching	STANDARD Always 0	09 (1)		58 (1)
	9	VTH	1	1	ABL Detection Vth Switching		09 (0)		58 (0)
	10	SFO	1	1	FO Switching for Sharpness	NTSC/others	05 (1)		198 (1)
	11	DCX	1	1	DC Trans. Ratio Switching		06 (1)		55 (1)
	12	SHT	1	1	Pre-/Overshoot ratio Switch	NTSC/others	06 (0)		199 (0)

http://cxema.ru

Adjustment Item Table

Device Name	Functionality No	Functionality Name	Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
VP	13	HDW	0	1	H Drive Pulse Width Switch		00 (6)		4F (6)
	14	AFC	1	03	AFC Gain Control	TV/Video/Text	0F (1-0)		8D (1-0)
	15	HOS	7	0F	H Oscillation		0C (7-4)		5B (7-4)
	16	HSS	0	1	Slice Level of H Sync Sep.		0D (1)		5C (1)
	17	VSS	0	1	Slice Level of V Sync Sep.		0D (0)		5C (0)
	18	HMS	0	1	Macro Vision C/m off/on	50/60Hz	0E (0)		7E (0)
	19	YUV	0	1	YUV Switch Control		01 (0)		50 (0)
	20	CDV	1	3	CD mode for Video	Video only	0D (5-4)		1A1 (5-4)
	21	RON	1	1	R ON	not memorized	01 (3)		50 (3)
	22	GON	1	1	G ON	not memorized	01 (2)		50 (2)
	23	BON	1	1	B ON	not memorized	01 (1)		50 (1)
	24	PON	1	1	P ON	not memorized	00 (7)		4F (7)
	25	BLK	0	1	BLK Off		12 (0)		61 (0)
	26	VMC	1	1	VM Off		13 (0)		62 (0)
AP	0	INF	0	3F	Input Attenuation When surround off		00 (5-0)	TDA7429	19F (5-0)
	1	INS	0	3F	Input Attenuation When surround on				1A0 (5-0)
	2	PH1	0	3	Phase 1 Register Selection		02		76 (1-0)
	3	PH2	0	3	Phase 2 Register Selection				76 (3-2)
	4	PH3	0	3	Phase 3 Register Selection				76 (5-4)
	5	PH4	0	3	Phase 4 Register Selection				76 (7-6)
	6	BCS	01	3	Bass Center Shift		#4 (3-0)		1A8 (1-0)
	7	TCS	2	3	Treble Center Shift		#5 (3-0)		1A9 (1-0)
	8	TRF	2	3	RF Treble Offset		#5 (3-0)		1A9 (5-4)
MSP	0	WST	15	FF	W/G Stereo Threshold			MSP3415D	157 (7-0)
	1	WBT	EA	FF	W/G Bilingual Threshold			(84H)	158 (7-0)
	2	WLL	5	FF	W/G Monaural Threshold				159 (7-0)
	3	WAC	0	0F	W/G Agreement Count				15A (3-0)
	4	WDL	30	FF	W/G Search Delay				15B (7-0)
	5	NDL	20	FF	NICAM Search Delay				15C (7-0)
	6	SDL	10	FF	Stereo status Read Delay				15D (7-0)
	7	AGC	1	1	AGC Switch Auto/Constant		BB (7)		108 (7)
	8	REL	28	3F	AGC Gain at Constant Mode		BB (6-1)		108 (6-1)
	9	CRM	0	1	Carrier muting on/off		BB (9)		107 (1)
	10	ACO	1	1	Audio Clock out on/off		83 (5)		10C (5)
	11	FP	1B	7F	FM Prescale for non-M system		0E (7-0)		16C (6-0)
	12	FPM	32	7F	FM Prescale for M system		0E (7-0)		16D (6-0)
	13	FH	36	7F	FM Prescale for HDEV		0E (7-0)		16E (6-0)
	14	FHM	65	7F	FM Prescale for HDEV and M		0E (7-0)		16F (6-0)
	15	WGP	2A	7F	W/G Prescale		0E (7-0)		170 (6-0)
	16	NIP	6D	7F	NICAM Prescale		10 (7-0)		138 (6-0)
	17	ERR	50	FF	Auto FM switch Threshold		21 (10-3)		166 (7-0)
	18	VOL	6D	FF	Loud Speaker gain 7000h to 7ffoh		0000 (15-4)		1A7 (7-0)

http://cxema.ru

Adjustment Item Table

Device Name	Functionality No	Functionality Name	Note	Data Range	Function	Note for Different Data	Register No. (bit)	Slava Address	RAM Address (bit)
TXT	0	TXH	1	3	Teletext Horizontal Position			(58H)	18D (1-0)
	1	TXV	0	3	Teletext Vertical Position				18D (6-4)
OPM	0	OSH	0A	3F	OSD H Position	Option-Misc			AC (7-2)
	1	COM	0	03	Comb Selection				A5 (7-6)
	2	APC	1	1	APC Switch				A4 (5)
	3	TSY	0	03	TV Sys at Auto TV Sys				A4 (4-3)
	4	MUT	0	1	No Signal Mute				A4 (0)
	5	AFM	1	1	Auto FM switch				A4 (1)
	6	RFB	0	3	C-BPF Control				A5 (5-4)
	7	TV0	0	7	Tilt to V-Angle offset				A5 (2-0)
	8	DBL	0	1	Disable Blueback Function				A4 (2)
OPB	0	OP1	FF	FF	Optional Bits 1 (see below)	Option-Bits			45
	1	OP2	1	FF	Optional Bits 2 (see below)				46
	2	OP3	0	FF	Optional Bits 3 (see below)				47

NOTE

- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
  In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION.

No. OPB0 OP1

Item	XTAL 4.43	XTAL 3.58	SECAM	2nd. Lang	B/G	I	D/K	M
KV-TF21M80	1	1	1	1	1	1	1	1

NOTE: When Bit 7, 6 & 5 = 000. Only PAL color system is selected.
When Bit 7 is selected, Auto, PAL & NTSC 4.43 Color system is enable
When Option is single color system, Color system cannot be changed & "AUTO" will bot be display

No. OPB1 OP2

Item	TOP	NICAM	HDEV	Thai Bil	Dis Fav.	DVD Input	AV Input	
KV-TF21M80	0	0	0	0	0	0	1	0

AV Input 00 = no AV Input 01 = 1 AV Input
10 = 2 AV Input 11 = 3 AV Input

DVD Input Effective only when "AV Input" is set to 3 AV input

Dis Fav. Disable Favorite Channel (Only Effective For 21" & 14" Models Only)

No. OPB2 OP3

Item	Pic Rot	2199 Curve	Auto PIC	Auto TV sys	US ST	AV Mono	11 KEY	Color SW
KV-TF21M80	0	0	1	0	0	0	0	1

Pic Rot*1	Picture Rotation Feature Switch	0 = disabled,	1 = enabled
2199 Curve*1	2199 Volume Curve Selection	0 = Others,	1 = 2199 Volume Curve
Auto PIC	Auto Picture Improvement	0 = inactive,	1 = active
A-TV sys	Auto TV System in Auto Program	0 = disabled,	1 = enabled
US ST	USA Stereo	0 = disabled,	1 = enabled
AV Mono*1	AV Mono models,	0 = Stereo,	1 = Mono (No Balance & Surround selection)
11 Key	Front Key Selection	0 = 7 key model,	1 = 11 key model
Color SW*2	Color Data Selection in Dynamic Mode	0 = 65 (No PIP),	1 = 57 (PIP)

Note: *1 - For XF-L (21" & 14") Models Only

http://cxema.ru

4-3. PICTURE QUALITY ADJUSTMENTS

SUB COLOR ADJUSTMENT

1. Input a PAL color-bar.
2. Set to the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
3. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
4. Set to Service Mode and select SAJ 3 'SCL' with [1] and [4] of the commander then adjust to VB2=VB3=VB4 with [3] and [6].
5. Press [MUTING] → [0] of the commander to write the data.
6. Adjust SAJ 3 'SCL' as step 2 to 5 when receiving NTSC color-bar.

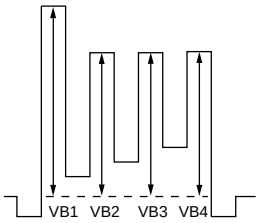

VB2 = VB3 = VB4

SUB HUE ADJUSTMENT

1. Select Video 1.
2. Input a NTSC color-bar, video into Video 1.
3. Set the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Select SAJ 1 'SHU' with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6].

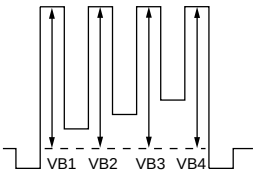

VB1 = VB2 = VB3 = VB4

6. Press [MUTING] → [0] of the commander to write the data.

BELL FILTER ADJUSTMENT

1. Input SECAM color-bar signal.
2. Connect the dual-trace oscilloscope to the pin ⑨ (R-Y) of CN303 (not mounted).
3. Adjust SERVICE MODE, ITEMS 'SBF' as shown below.

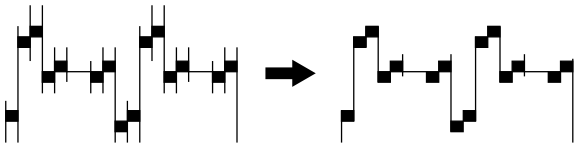

4-4. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

When replacing IC003 (MEMONY), be sure to change IC001 (µ-COM) to the following new IC at the same time.
IC001 (µ-CON) : CXP86449-622S

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the items with fine adjustment.
   Write the data per each item number ([MUTING] +[0]).
4. Select item numbers "OPB0" (OP1), "OPB1" (OP2) and "OPB2" (OP3) and respectively set the bit per model with command buttons [3] and [6].
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory.
   (This will also cancel Service Mode.)

http://cxema.ru

4-5. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 0B

GEO 0 HPS (H POSITION)



GEO 1 HSZ (H SIZE)



GEO 2 PAP (PIN AMP)



GEO 3 TLT (TRAPEZIUM)



GEO 4 VPS (V POSITION)



GEO 5 VSZ (V SIZE)



GEO 6 SCO (VERTICAL S-Correction)



GEO 7 VLN (V LINEARITY)



GEO 8 BOW (AFC.BOW)



GEO 9 AGL (AFC.ANGLE)



GEO 0A UCP (UPPER CORNER PIN)
GEO 0B LCP (LOWER CORNER PIN)



http://cxema.ru

http://cxema.ru

SECTION 5
DIAGRAM

5-1. BLOCK DIAGRAM

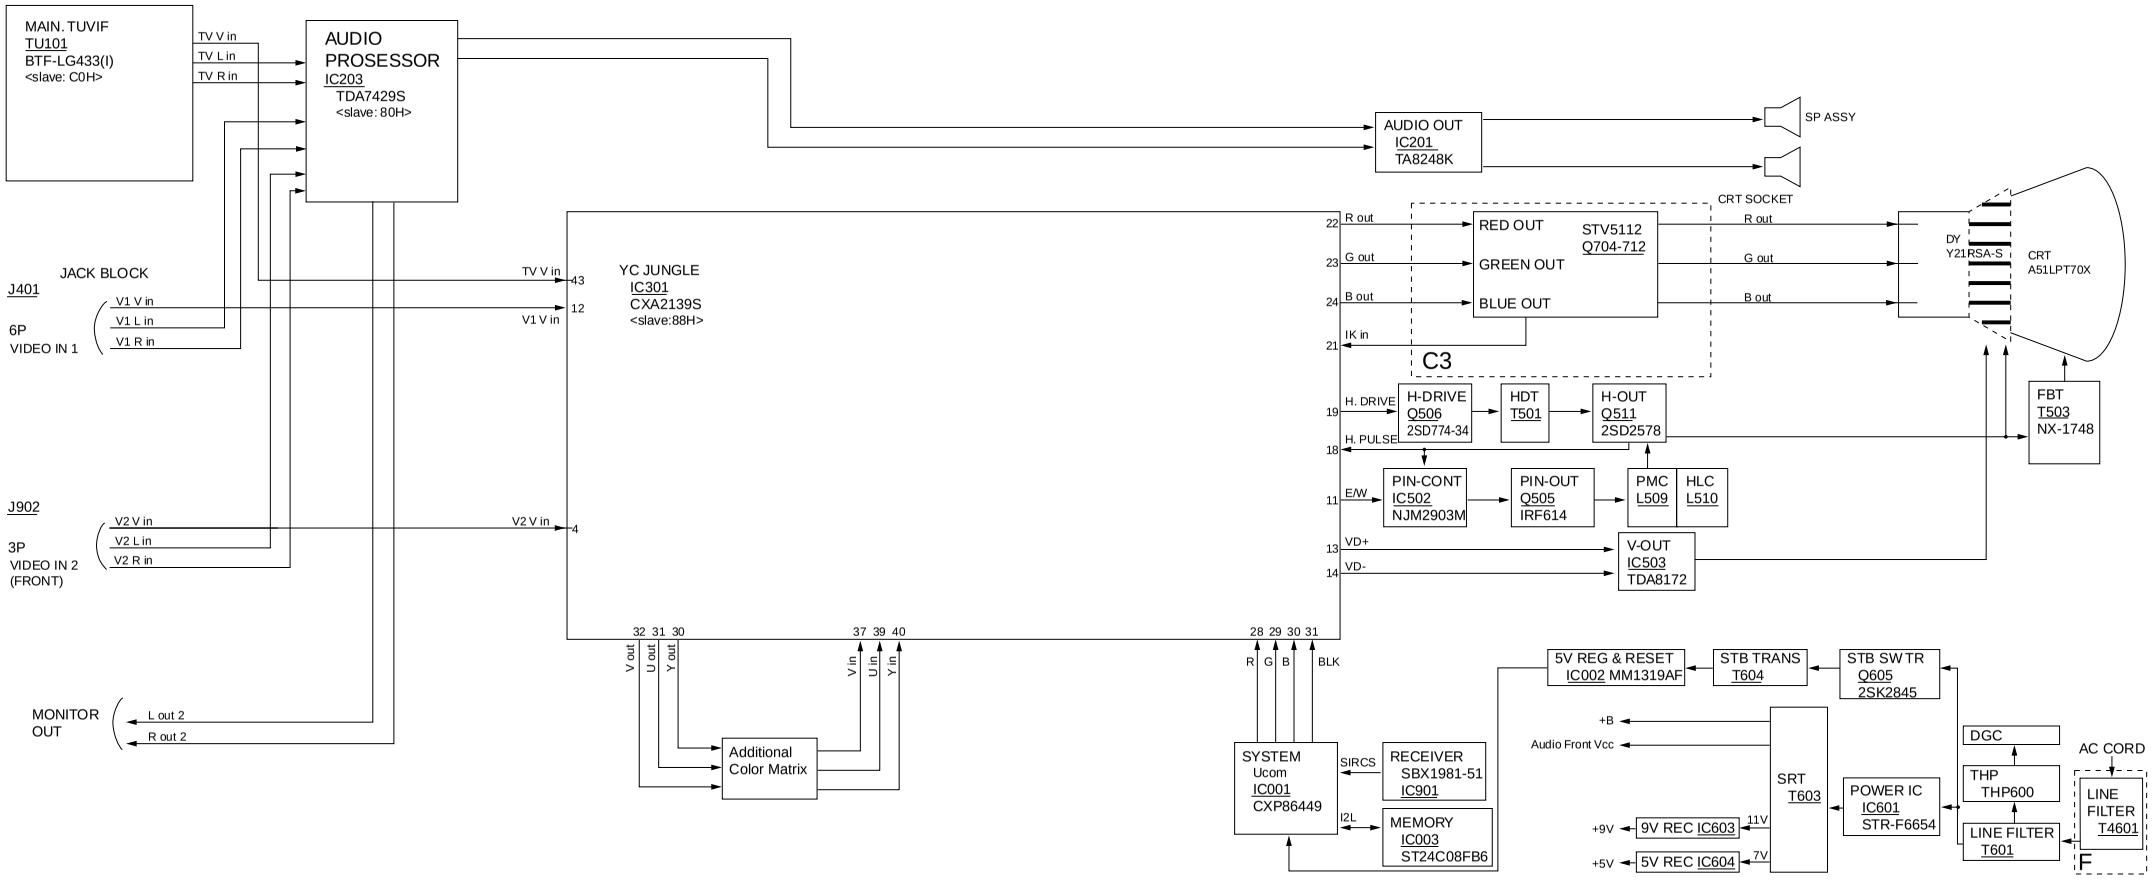

http://cxema.ru

5-2. FRAME SCHEMATIC DIAGARM

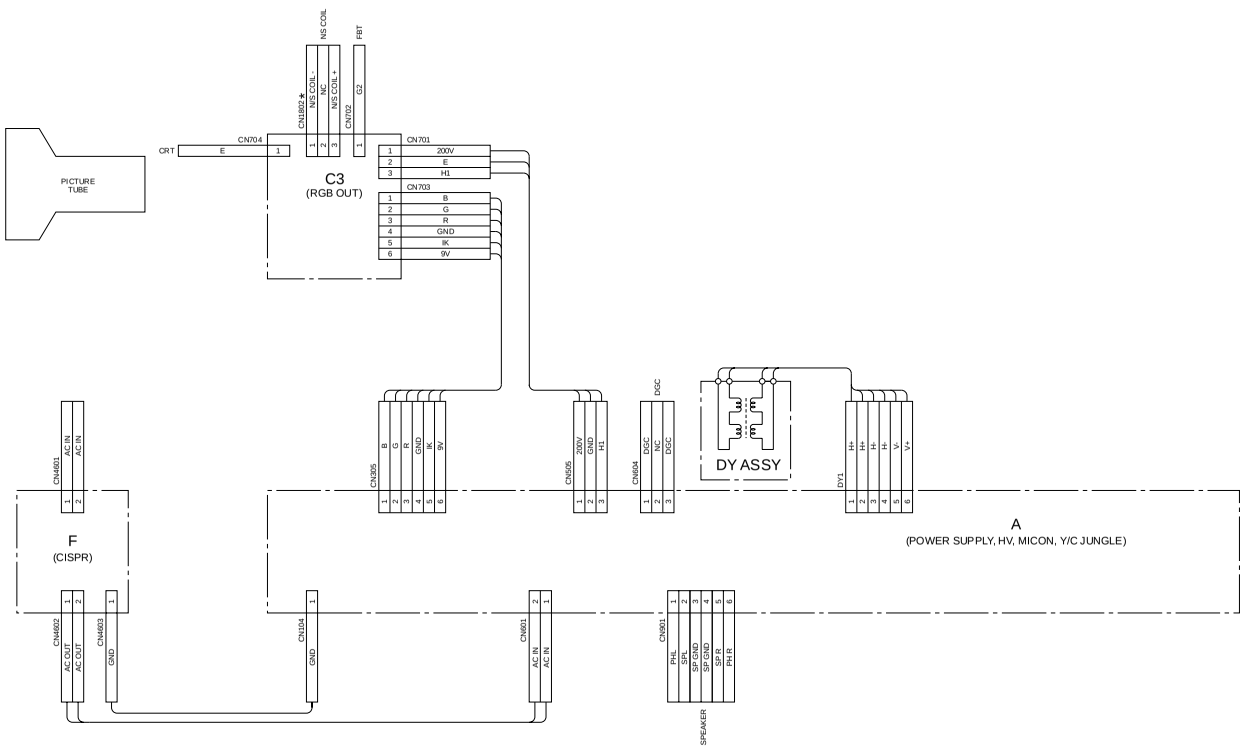

KV-TF21M80
RM-952

5-3. CIRCUIT BOARDS LOCATION

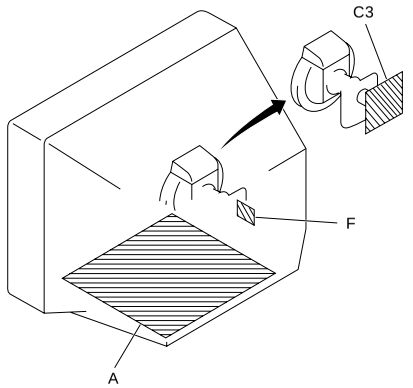

5-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.
  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)
- : nonflammable resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Readings are taken with a color-bar signal input.**
  no mark : PAL.
  ( ) : SECAM
  [ ] : NTSC 3.58
  « » : NTSC 4.43
- **Readings are taken with a 10 MΩ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltages are in V.**
- ✻ **: Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B + bus.**
- **: B – bus.**
- **: signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

http://cxema.ru

(1) Schematic Diagram of A(1/2) board

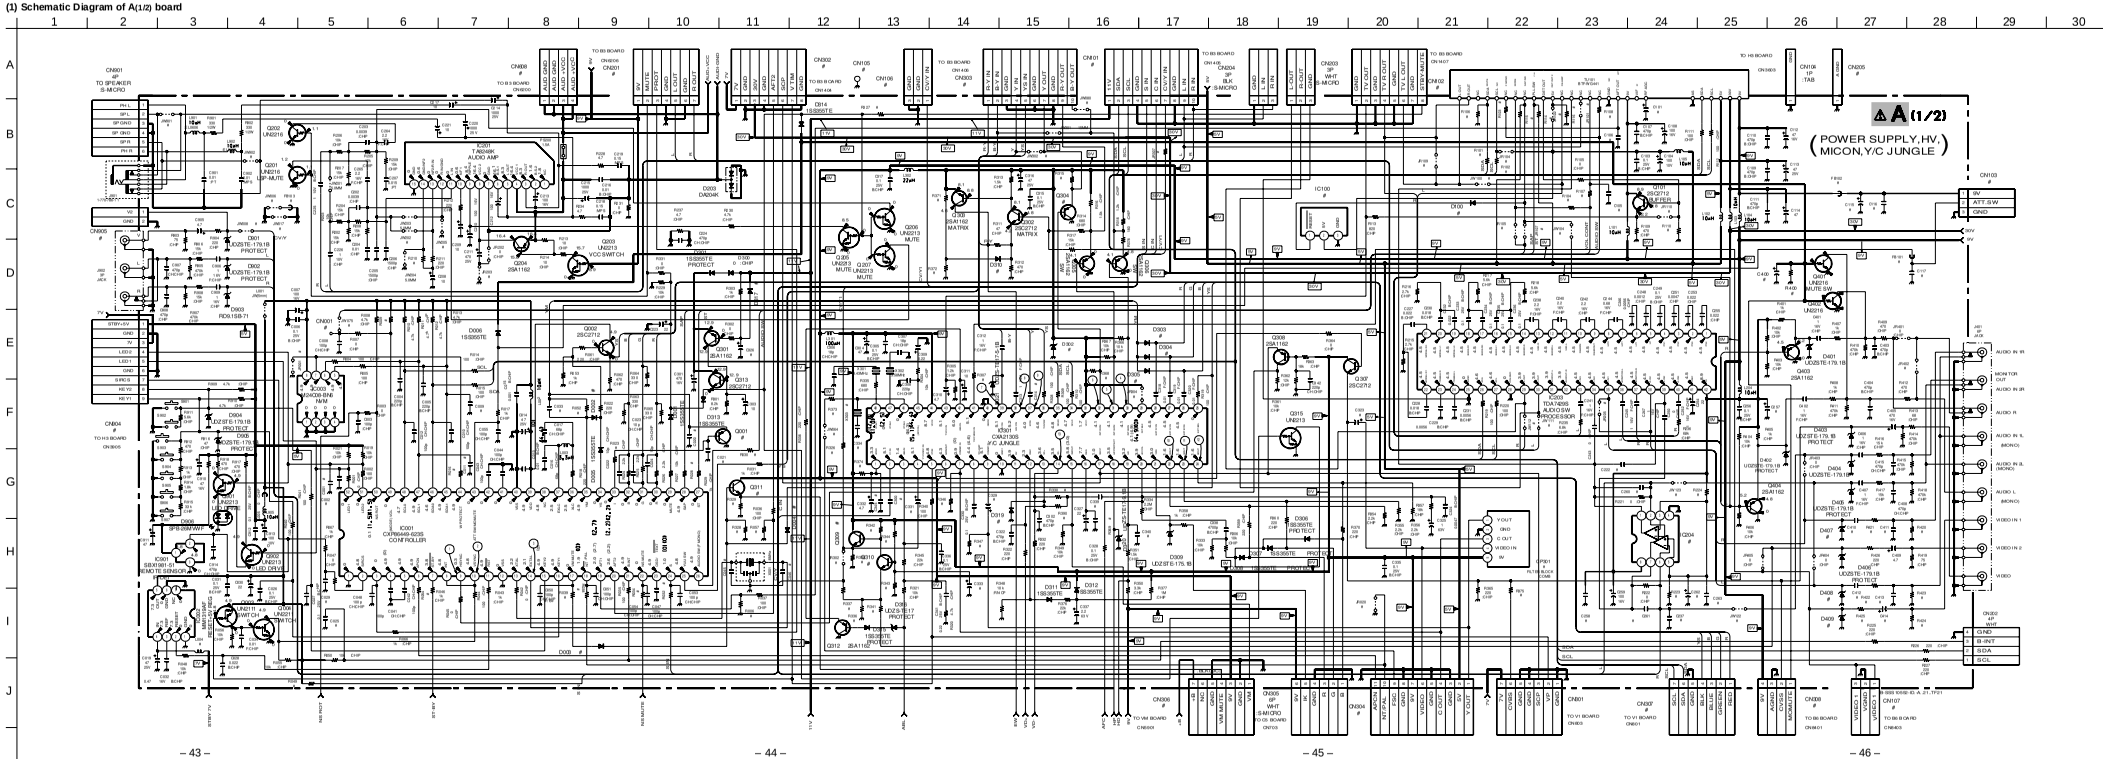

http://cxema.ru

(2) Schematic Diagram of A(2/2) board

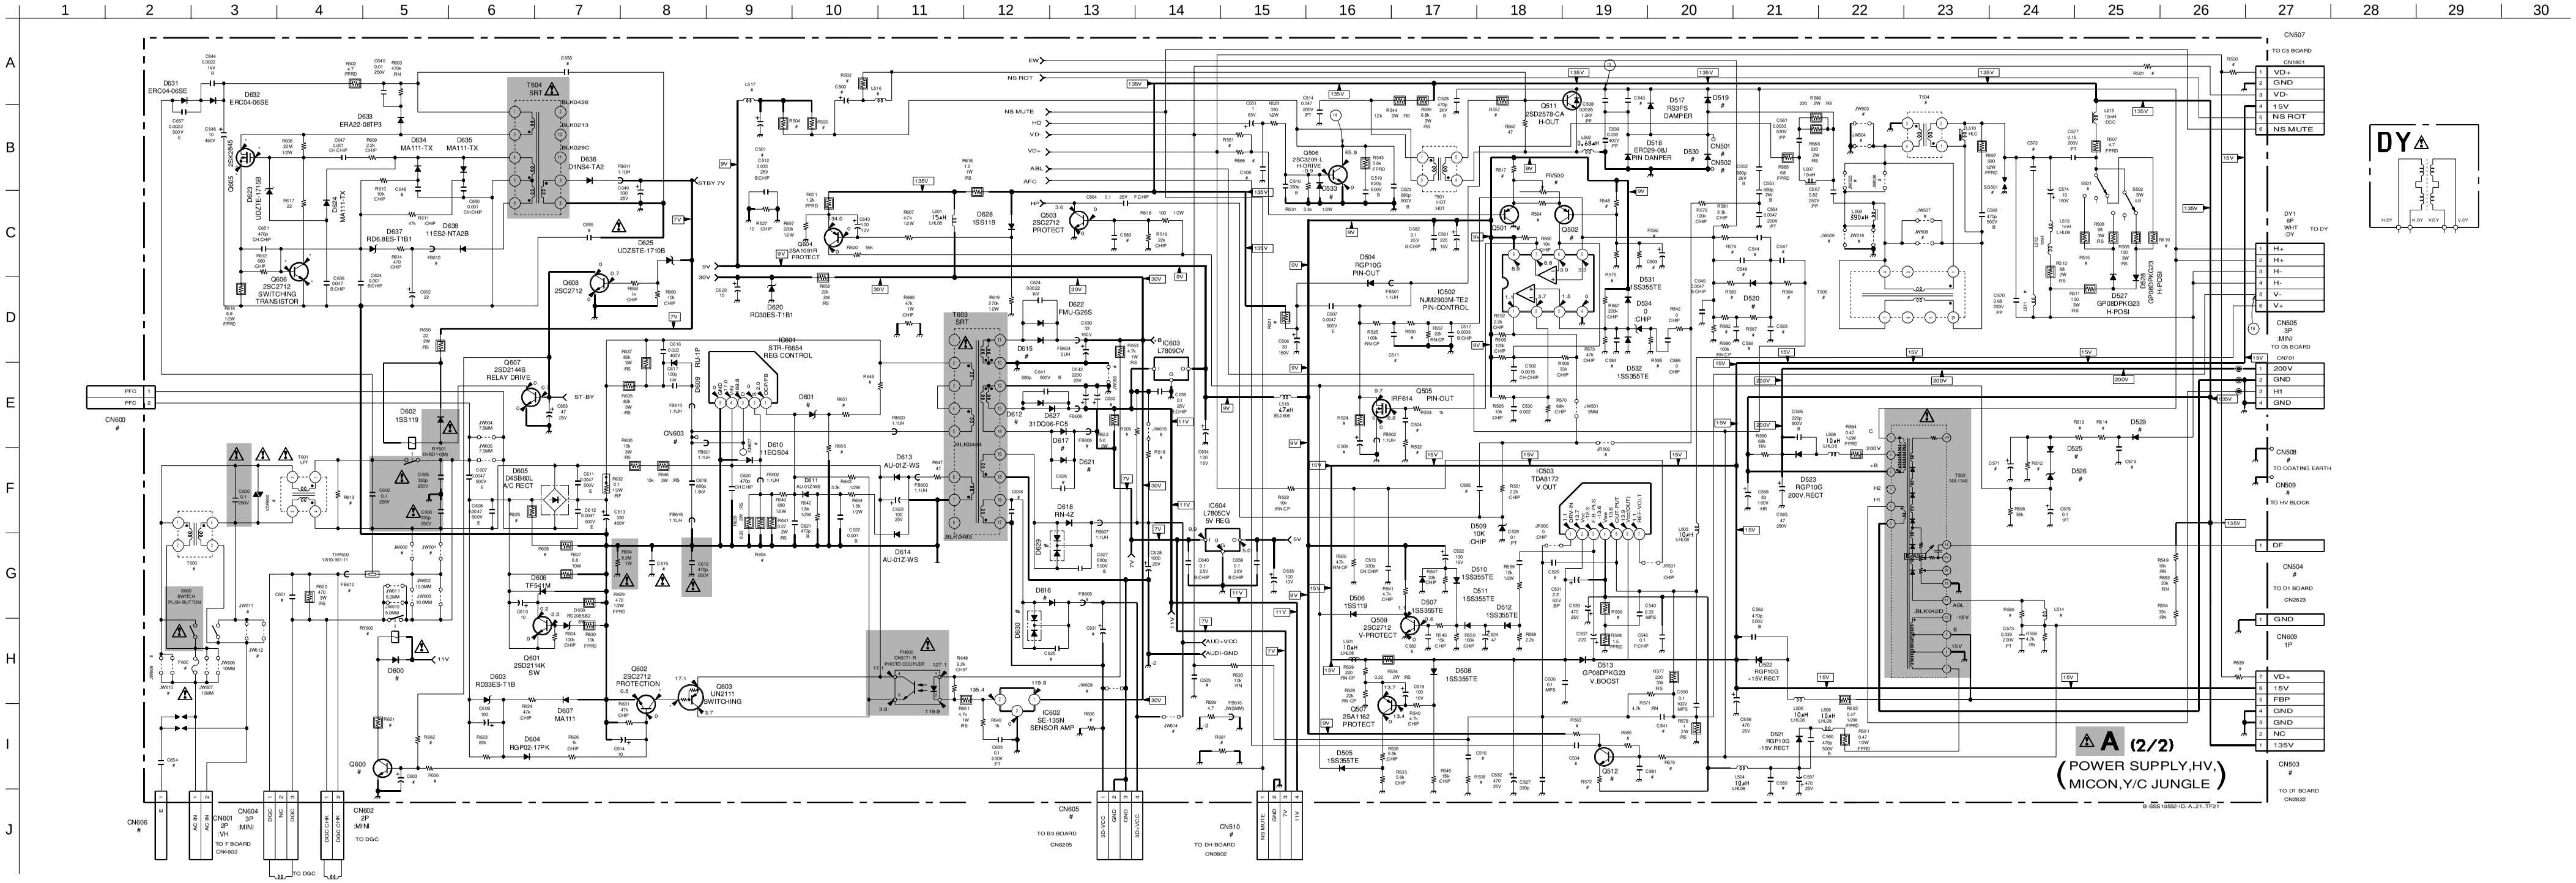
A (2/2)
POWER SUPPLY,HV,
MICON,Y/C JUNGLE
DY
CN507
CN505
CN701
CN503
CN504
CN609
CN600
CN606
CN601
CN604
CN602
CN605
CN510
T603 SRT
T604 SRT
T503
IC601 STR-F6654 REG CONTROL
IC502 NJM2903M-TE2 PIN-CONTROL
IC503 TDA8172 V.OUT
IC603 L7809CV
IC604 L7805CV 5V REG
IC602 SE-135N SENSOR AMP
Q511 2SD2578-CA H-OUT
Q506 2SC3209-L H-DRIVE
Q505 PIN-OUT
Q509 2SC2712 V-PROTECT
Q507 2SA1162 PROTECT
Q503 2SC2712 PROTECT
Q604 2SA1091R PROTECT
Q606 2SC2712 SWITCHING TRANSISTOR
Q607 2SD2144S RELAY DRIVE
Q608 2SC2712
Q601 2SD2114K SW
Q602 2SC2712 PROTECTION
Q603 UN2111 SWITCHING
PH600 ON3171-R PHOTO COUPLER
D605 D4SB60L A/C RECT
D523 RGP10G 200V.RECT
D522 RGP10G +15V.RECT
D521 RGP10G -15V.RECT
D513 GP08DPKG23 V.BOOST
D527 GP08DPKG23 H-POSI
D528 GP08DPKG23 H-POSI
D517 RS3FS DAMPER
D518 ERD29-08J PIN DANPER

http://cxema.ru

A BOARD

IC		DIODE			
IC001	B-10	D001	B-8	D533	D-2
IC002	C-10	D002	B-8	D534	E-6
IC003	A-9	D003	C-9	D600	G-13
IC100	B-5			D601	I-8
IC201	B-11	D004	D-8	D602	G-13
IC203	B-3	D005	B-8	D603	F-11
IC204	B-2	D006	A-3	D604	J-7
IC301	B-6	D100	B-5	D605	G-10
IC502	E-6	D203	C-11	D606	E-11
IC503	J-5	D300	A-9	D607	F-10
IC601	I-8	D301	B-9	D608	F-11
IC602	H-7	D302	B-6	D609	H-8
IC603	D-8	D303	B-5	D610	J-8
IC604	D-10	D304	B-5	D611	I-7
IC901	I-13	D305	B-5	D612	F-8
PH600	H-7	D306	C-5	D613	I-7
		D307	C-5	D614	H-7
TRANSISTOR		D308	B-5	D615	E-7
		D309	B-6	D616	E-9
Q001	B-8	D310	A-6	D617	F-8
Q002	B-8	D311	C-6	D618	F-9
Q003	C-9	D312	C-6	D620	D-8
Q004	C-9	D313	A-8	D621	F-9
Q101	A-4	D315	B-7	D622	F-8
Q201	A-11	D316	C-7	D623	F-12
Q202	A-11	D317	B-9	D624	F-12
Q203	C-11	D314	A-9	D625	D-12
Q204	C-12	D319	C-7	D627	F-8
Q205	A-12	D320	C-6	D628	G-5
Q206	A-11	D321	B-6	D629	F-9
Q207	A-12	D322	B-6	D630	E-10
Q301	B-8	D401	D-2	D631	G-12
Q302	B-6	D402	C-3	D632	F-12
Q303	A-6	D403	B-2	D633	E-12
Q304	B-6	D404	C-2	D634	F-11
Q305	B-5	D405	C-1	D635	F-12
Q306	B-5	D406	B-1	D636	D-12
Q307	C-7	D407	C-2	D637	F-11
Q308	C-7	D408	C-1	D638	E-11
Q311	D-9	D409	A-1	D901	C-13
Q312	B-7	D504	D-5	D902	D-13
Q313	B-8	D505	H-6	D903	C-13
Q315	B-5	D506	F-6	D904	D-13
Q401	D-2	D507	F-6	D905	F-13
Q402	D-1	D508	I-5	D906	I-13
Q403	D-2	D509	F-6		
Q404	C-3	D510	F-5		
Q501	D-6	D511	F-5		
Q502	E-7	D512	G-5		
Q503	F-6	D513	I-5		
Q505	D-6	D517	F-2		
Q506	D-2	D518	F-2		
Q507	H-6	D519	F-2		
Q509	F-6	D520	E-5		
Q511	F-1	D521	I-4		
Q600	D-12	D522	J-4		
Q601	F-11	D523	H-4		
Q602	J-7	D525	F-5		
Q603	I-7	D526	F-6		
Q604	H-6	D527	F-3		
Q605	E-12	D528	F-3		
Q606	F-11	D529	F-5		
Q607	H-13	D530	F-2		
Q608	D-12	D531	E-6		
Q901	H-13	D532	E-6		
Q902	H-13				

KV-TF21M80 RM-952 KV-TF21M80 RM-952

A [POWER SUPPLY, HV, MICON, Y/C JUNGLE]

PRINTED WIRING BOARD

– A Board –

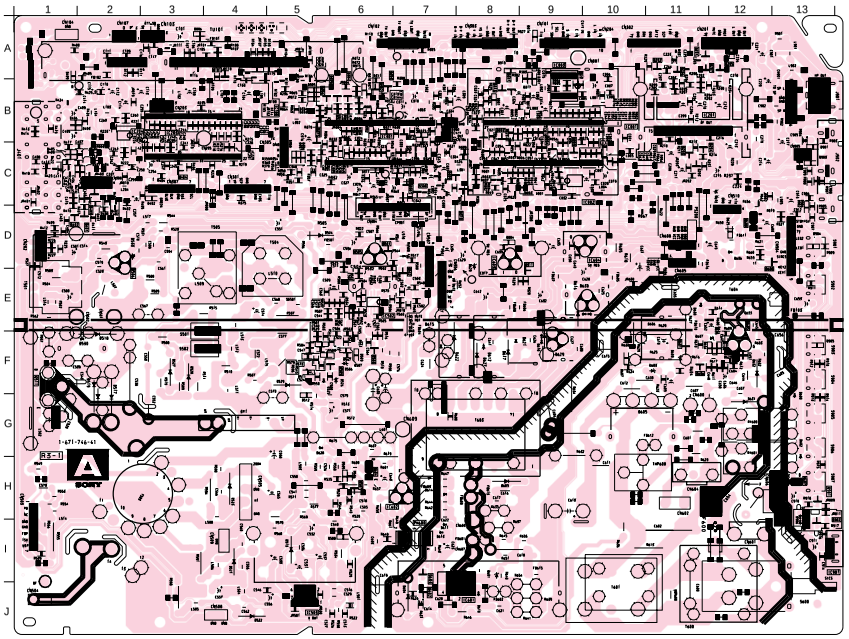

KV-TF21M80 RM-952 KV-TF21M80 RM-952

A BOARD IC001 CXP86449-622S

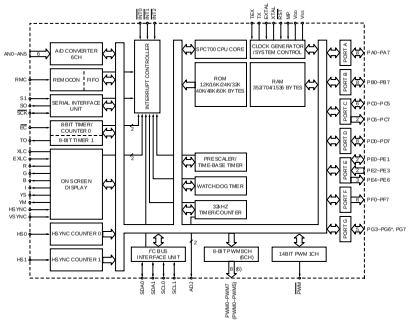

A BOARD WAVEFORMS

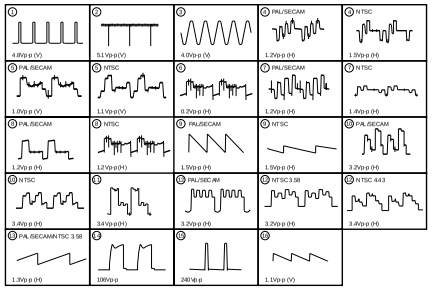



NOTE:
The circuit indicated at left contains high voltage of over 600 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

http://cxema.ru

(3) Schematic Diagrams of C3 and F boards

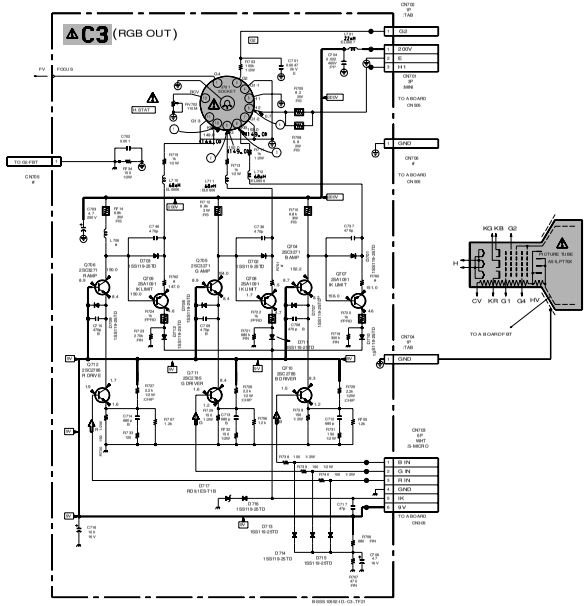

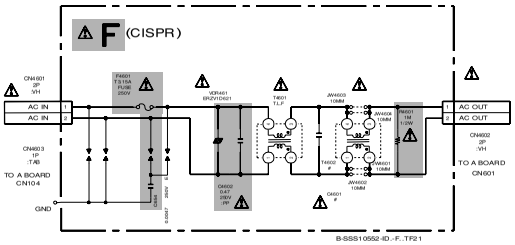

C3 BOARD WAVEFORMS

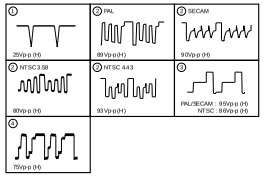

C3 [RGB OUT] F [CISPR]

PRINTED WIRING BOARDS

– C3 Board –

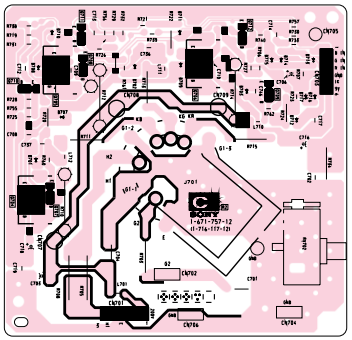

– F Board –

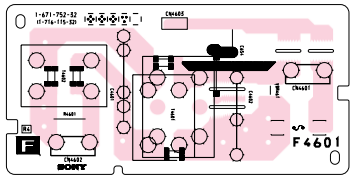

http://cxema.ru

5-5. SEMICONDUCTORS

DIODE

AU-01Z-WS
GP08D
RD33-T1B2
RGP02-17PKG23
RGP10GPK23



D4SB60L



ERC04-06SE
RS3FS
31DQ06-FC5



ERA22-08TP3
ERD29-08J



MA111-TX
RD9.1SB-T1
UDZS-TE17-5.1B
UDZS-TE17-6.8B
UDZS-TE17-9.1B
1SS355TE-17
UDZ-TE17-15B
UDZS-TE17-10B



ON3171-R



D1NS4-TA2
RD20ES-T1B2
RD30ESB2
RD6.8ES-T1B1
1SS119-25TD
11EQS04
11ES2-NTA2B



TF541M

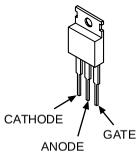

DA204K



LED

SPB-26MVWF

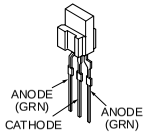

TRANSISTOR

UN2111
UN2211
UN2213
UN2216
2SA1162-YG-TE85L
2SC2712-YG
2SD2114K-T146



2SC2785-TP-HFE



2SA1091-O
2SA1091R-TPE2



2SD2144S-TP-UVW



2SC3271F-N



2SC3209-L



IRF614



2SK2845-LB102



2SD2578-CA



IC

CXA2139S (64PIN)
CXP86469-622S (64PIN)
M24C08-BN6 (8PIN)
TDA7429S (42PIN)



Dual In-line Package
Pin 6～98

MM1319AFBE (7PIN)
NJM2903M (8PIN)

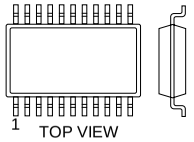

Single In -line Package
Pin 6～98

L7805CV



SBX1981-51(21)

SE-135N



TDA8172



STR-F6654

MARKING SIDE VIEW

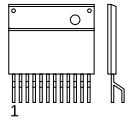

Zig-zag In -line Package
Pin 6～99

RU-1P

MARKING SIDE
VIEW

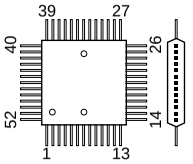

TA8248K



L7809CV

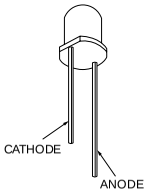

http://cxema.ru

SECTION 6
EXPLODED VIEW

6-1. CHASSIS

●: BVTP 3 × 12 7-685-648-79
■: BVTP 4 × 16 7-685-663-71

NOTE: The picture tube for OCE model is upside down, and the position anode cap and tension springs are changed accordingly.

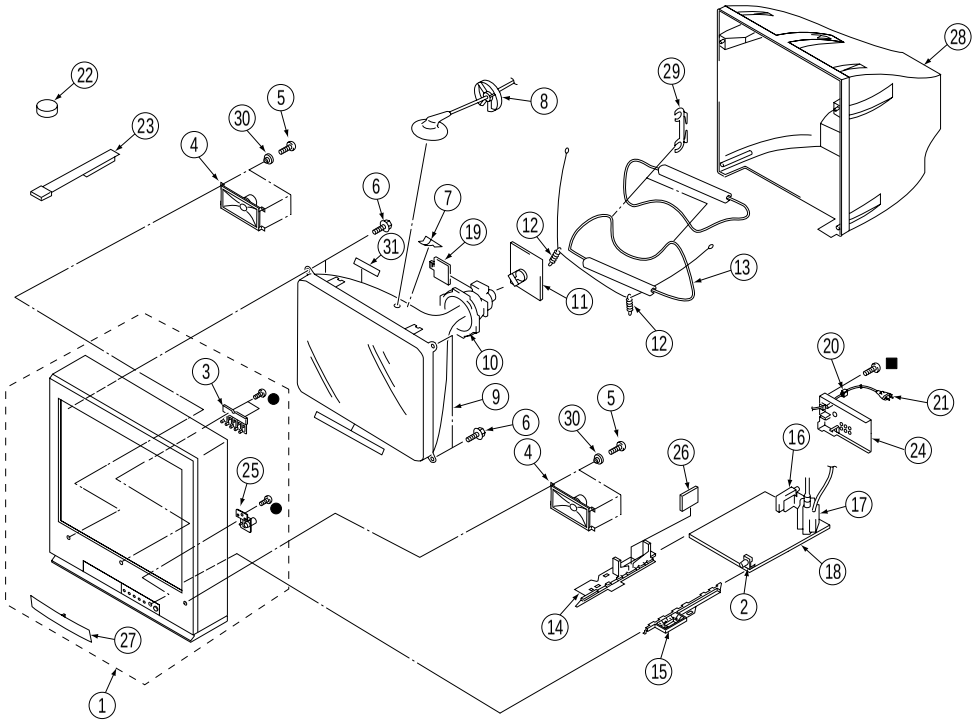

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		X-4037-512-2	BEZNET ASSY	3, 27, 25
2		4-070-291-01	BUTTON, POWER	
3		4-070-290-01	BUTTON, MULTI	
4		1-505-740-11	SPEAKER (5X9CM)	
5		4-054-981-01	SCREW, STEP TAPPING	
6		4-365-808-01	SCREW (5), TAPPING	
7		4-046-600-11	SPACER, DY	
8	*	3-704-372-41	HOLDER, HV CABLE	
9	⚠	8-738-809-05	PICTURE TUBE (A51LPT70X)	
10		8-451-505-11	DEFLECTION YOKE (Y21RSA-S)	
11	*	A-1331-056-A	C3 BOARD MOUNTED	
12		4-369-318-61	SPRING, TENSION	
13		1-416-946-11	COIL, DEMAGNETIC	
14	*	4-070-139-01	PWB(L), GUIDE	
15	*	4-070-138-01	PWB(R), GUIDE	
16	⚠	8-598-449-10	TUNER, FSS BTF-LG433	
17	⚠	1-453-293-11	TRANSFORMER ASSY, FLYBACK	
18	*	A-1299-200-A	A BOARD COMPLETE	
19		4-057-714-01	PIECE ASSY, TLH CORRECTION	
20		4-022-115-21	HOLDER, AC CORD	
21		1-574-062-11	CORD, POWER (WITH CONNECTOR) 2.5A/250V	
22		1-452-032-00	MAGNET,DISC	
23		4-051-736-41	PIECE A(90), CONV, CORRECT	
24		4-070-140-11	BRACKET,TERMINAL	
25	*	4-070-292-01	BAR, OPTICAL	
26	*	A-1241-372-A	F BOARD MOUNTED	
27		X-4037-511-1	DOOR ASSY, CONTROL	
28		4-070-300-01	COVER, REAR	
29		4-064-883-11	HOLDER, DGC	
30	*	4-379-189-11	CUSHION, SPEAKER	
31		4-069-652-51	CUSHION (HS BAND)	

SECTION 7
ELECTRICAL PARTS LIST

A

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF. NO.	PART NO.	DESCRIPTION			REMARK
*	A-1299-200-A	A BOARD COMPLETE			
		**********			
*	4-040-983-41	TERMINAL BOARD (D)			
*	4-055-304-01	HOLDER, LED			
*	4-070-141-01	HOLDER, FBT			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
	4-382-854-21	SCREW (M3X14), P, SW (+)			
	7-685-648-79	SCREW +BVTP	3X12 TYPE2 N-S		
		<CAPACITOR>			
C003	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C004	1-163-001-51	CERAMIC CHIP	220PF	10% 50V	
C005	1-163-001-51	CERAMIC CHIP	220PF	10% 50V	
C006	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C007	1-104-664-11	ELECT	47UF	20.00% 16V	
C008	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C010	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C012	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C013	1-164-232-11	CERAMIC CHIP	0.01UF	10.00% 50V	
C014	1-104-664-11	ELECT	47UF	20.00% 25V	
C015	1-163-009-11	CERAMIC CHIP	0.001UF	10.00% 50V	
C016	1-163-113-00	CERAMIC CHIP	68PF	10% 50V	
C017	1-163-113-00	CERAMIC CHIP	68PF	10% 50V	
C019	1-104-664-11	ELECT	47UF	20.00% 25V	
C022	1-163-227-51	CERAMIC CHIP	10PF	0.50PF 50V	
C023	1-163-227-51	CERAMIC CHIP	10PF	0.50PF 50V	
C024	1-163-227-51	CERAMIC CHIP	10PF	0.50PF 50V	
C026	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C027	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C028	1-163-037-11	CERAMIC CHIP	0.022UF	10.00% 50V	
C030	1-126-965-11	ELECT	22UF	20.00% 50V	
C031	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C032	1-107-823-51	CERAMIC CHIP	470000PF	10% 16V	
C034	1-163-031-11	CERAMIC CHIP	0.01UF	50V	
C041	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C042	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C043	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C044	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C047	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C048	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C050	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C051	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C053	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C054	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C055	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C103	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C104	1-104-665-11	ELECT	100UF	20.00% 10V	
C107	1-163-005-51	CERAMIC CHIP	470PF	10% 50V	
C108	1-104-664-11	ELECT	47UF	20.00% 16V	
C109	1-163-005-51	CERAMIC CHIP	470PF	10% 50V	
C110	1-163-005-51	CERAMIC CHIP	470PF	10% 50V	
C111	1-163-005-51	CERAMIC CHIP	470PF	10% 50V	
C112	1-104-664-11	ELECT	47UF	20.00% 16V	
C113	1-104-664-11	ELECT	47UF	20.00% 25V	
C114	1-126-967-11	ELECT	47UF	20.00% 50V	
C202	1-163-016-91	CERAMIC CHIP	3900PF	10% 50V	
C203	1-163-016-91	CERAMIC CHIP	3900PF	10% 50V	
C204	1-136-153-00	MYLAR	0.01UF	5.00% 50V	
C205	1-163-011-91	CERAMIC CHIP	1500PF	10% 50V	
C206	1-163-011-91	CERAMIC CHIP	1500PF	10% 50V	
C207	1-136-153-00	MYLAR	0.01UF	5.00% 50V	
C208	1-125-797-91	ELECT	10UF	20.00% 50V	
C209	1-125-797-91	ELECT	10UF	20.00% 50V	
C210	1-126-933-11	ELECT	100UF	20.00% 16V	
C211	1-126-941-11	ELECT	470UF	20.00% 25V	
C212	1-126-933-11	ELECT	100UF	20.00% 16V	
C213	1-126-933-11	ELECT	100UF	20.00% 16V	
C214	1-126-942-61	ELECT	1000UF	20.00% 25V	
C215	1-126-942-61	ELECT	1000UF	20.00% 25V	
C216	1-164-232-11	CERAMIC CHIP	0.01UF	10.00% 50V	
C217	1-125-797-91	ELECT	10UF	20.00% 50V	
C218	1-136-167-00	MYLAR	0.15UF	5.00% 50V	
C219	1-136-167-00	MYLAR	0.15UF	5.00% 50V	
C220	1-126-942-61	ELECT	1000UF	20.00% 25V	
C221	1-125-797-91	ELECT	10UF	20.00% 50V	
C223	1-126-965-11	ELECT	22UF	20.00% 50V	
C224	1-163-133-00	CERAMIC CHIP	470PF	10% 50V	
C225	1-109-982-51	CERAMIC CHIP	1UF	10.00% 10V	
C226	1-109-982-51	CERAMIC CHIP	1UF	10.00% 10V	
C227	1-163-037-11	CERAMIC CHIP	0.022UF	10.00% 50V	
C228	1-163-024-00	CERAMIC CHIP	0.018UF	10.00% 50V	
C229	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00% 50V	
C230	1-163-024-00	CERAMIC CHIP	0.018UF	10.00% 50V	
C231	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00% 50V	
C232	1-163-037-11	CERAMIC CHIP	0.022UF	10.00% 50V	
C233	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C234	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C235	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C236	1-164-004-51	CERAMIC CHIP	0.1UF	10.00% 25V	
C238	1-164-505-11	CERAMIC CHIP	2.2UF	16V	
C240	1-164-505-11	CERAMIC CHIP	2.2UF	16V	
C241	1-164-346-51	CERAMIC CHIP	1UF	10% 16V	

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
C242	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C243	1-216-295-61	SHORT CHIP	0		
C244	1-164-700-51	CERAMIC CHIP	0.68UF		16V
C245	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C246	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C247	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C248	1-163-010-11	CERAMIC CHIP	0.0012UF	10.00%	50V
C249	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C250	1-216-295-61	SHORT CHIP	0		
C251	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C252	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C253	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C254	1-126-965-11	ELECT	22UF	20.00%	50V
C255	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C256	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C259	1-126-933-11	ELECT	100UF	20.00%	16V
C264	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C265	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C301	1-126-935-11	ELECT	470UF	20.00%	16V
C302	1-163-005-51	CERAMIC CHIP	470PF	10%	50V
C303	1-125-797-91	ELECT	10UF	20.00%	50V
C304	1-126-967-11	ELECT	47UF	20.00%	50V
C305	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C306	1-163-233-51	CERAMIC CHIP	18PF	5.00%	50V
C307	1-163-233-51	CERAMIC CHIP	18PF	5.00%	50V
C308	1-163-125-00	CERAMIC CHIP	220PF	5.00%	50V
C309	1-126-957-11	ELECT	0.22UF	20.00%	50V
C310	1-125-805-91	ELECT	4.7UF	20.00%	50V
C311	1-125-797-91	ELECT	10UF	20.00%	50V
C312	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C313	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C315	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C316	1-104-664-11	ELECT	47UF	20.00%	25V
C317	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C318	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C319	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C320	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C322	1-163-005-51	CERAMIC CHIP	470PF	10%	50V
C324	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C325	1-125-799-91	ELECT	1UF	20.00%	63V
C327	1-126-965-11	ELECT	22UF	20.00%	50V
C328	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C330	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C332	1-125-805-91	ELECT	4.7UF	20.00%	50V
C335	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C336	1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C337	1-125-800-91	ELECT	2.2UF	20.00%	63V
C338	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C341	1-115-340-51	CERAMIC CHIP	0.22UF	10.00%	25V
C342	1-163-125-00	CERAMIC CHIP	220PF	5.00%	50V
C401	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C402	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C403	1-163-005-51	CERAMIC CHIP	470PF	10%	50V
C404	1-163-005-51	CERAMIC CHIP	470PF	10%	50V
C405	1-126-935-11	ELECT	470UF	20.00%	16V
C406	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C407	1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C408	1-163-133-00	CERAMIC CHIP	470PF	10%	50V

REF. NO.		PART NO.	DESCRIPTION			REMARK
C409		1-125-805-91	ELECT	4.7UF	20.00%	50V
C415		1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C502		1-163-145-00	CERAMIC CHIP	0.0015UF	5.00%	50V
C506		1-107-638-11	ELECT	33UF	20.00%	160V
C507		1-161-830-00	CERAMIC	0.0047UF		500V
C510		1-102-112-00	CERAMIC	330PF	10.00%	50V
C512		1-163-989-51	CERAMIC CHIP	0.033UF	10.00%	25V
C513		1-163-263-51	CERAMIC CHIP	330PF	10%	50V
C514		1-106-383-00	MYLAR	0.047UF	10.00%	200V
C517		1-164-182-11	CERAMIC CHIP	3300PF	10%	50V
C518		1-104-665-11	ELECT	100UF	20.00%	10V
C519		1-102-212-00	CERAMIC	820PF	10.00%	500V
C521		1-126-934-11	ELECT	220UF	20.00%	16V
C522		1-126-933-11	ELECT	100UF	20.00%	16V
C523		1-102-002-00	CERAMIC	680PF	10.00%	500V
C524		1-126-967-11	ELECT	47UF	20.00%	50V
C526		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C527		1-102-820-00	CERAMIC	330PF	5.00%	50V
C528		1-162-134-11	CERAMIC	470PF	10.00%	2KV
C530		1-137-372-11	MYLAR	0.022UF	5.00%	50V
C531		1-125-800-91	ELECT	2.2UF	20.00%	63V
C532		1-126-941-11	ELECT	470UF	20.00%	25V
C533		1-126-941-11	ELECT	470UF	20.00%	25V
C536		1-136-165-00	MYLAR	0.1UF	5.00%	50V
C537		1-126-969-11	ELECT	220UF	20.00%	50V
C538		1-136-076-00	FILM	0.0085UF	3.00%	2KV
C539		1-129-746-91	FILM	0.039UF	5.00%	400V
C540		1-136-171-00	MYLAR	0.33UF	5.00%	50V
C546		1-165-319-11	CERAMIC CHIP	0.1UF		50V
C549		1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C550		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C551		1-125-799-91	ELECT	1UF	20.00%	63V
C552		1-162-116-00	CERAMIC	680PF	10.00%	2KV
C553		1-162-116-00	CERAMIC	680PF	10.00%	2KV
C554		1-137-417-11	MYLAR	0.0047UF	10.00%	200V
C556		1-126-941-11	ELECT	470UF	20.00%	25V
C557		1-126-941-11	ELECT	470UF	20.00%	25V
C558		1-123-024-21	ELECT	33UF		160V
C560		1-102-228-00	CERAMIC	470PF	10.00%	500V
C561		1-129-708-91	FILM	0.0033UF	5.00%	630V
C562		1-102-228-00	CERAMIC	470PF	10.00%	500V
C564		1-163-038-00	CERAMIC CHIP	0.1UF		25V
C565		1-107-655-11	ELECT	47UF	20.00%	250V
C566		1-102-244-00	CERAMIC	220PF	10.00%	500V
C567		1-115-521-11	FILM	0.82UF	5.00%	250V
C568		1-102-228-00	CERAMIC	470PF	10.00%	500V
C570		1-115-520-11	FILM	0.68UF	5.00%	250V
C573		1-106-379-12	MYLAR	0.033UF	10.00%	200V
C574		1-107-636-11	ELECT	10UF	20.00%	160V
C576		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C577		1-106-395-00	MYLAR	0.15UF	10.00%	200V
C582		1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C586		1-216-295-61	SHORT CHIP	0		
C600	⚠	1-104-705-11	MYLAR	0.1UF	20.00%	250V
C602	⚠	1-104-705-11	MYLAR	0.1UF	20.00%	250V
C604		1-163-009-11	CERAMIC CHIP	0.001UF	10.00%	50V
C605	⚠	1-127-942-51	CERAMIC	330PF	10%	250V

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF. NO.		PART NO.	DESCRIPTION			REMARK
C606	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C607		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C608		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-126-968-11	ELECT	100UF	20.00%	50V
C610		1-125-797-91	ELECT	10UF	20.00%	50V
C611		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C612		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C613		1-117-752-11	ELECT(BLOCK)	330UF	20.00%	450V
C614		1-125-797-91	ELECT	10UF	20.00%	50V
C616		1-130-202-00	FILM	0.022UF	10.00%	400V
C617		1-107-792-11	CERAMIC	100PF	5.00%	1KV
C618		1-125-893-11	FILM	680PF	3.00%	1.5KV
C619	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C620		1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C621		1-102-114-00	CERAMIC	470PF	10.00%	50V
C622		1-102-119-00	CERAMIC	0.0015UF	10.00%	50V
C623		1-104-665-11	ELECT	100UF	20.00%	25V
C624		1-125-772-91	CERAMIC	1500PF	10.00%	2KV
C627		1-102-002-00	CERAMIC	680PF	10.00%	500V
C628		1-126-942-61	ELECT	1000UF	20.00%	25V
C629		1-125-797-91	ELECT	10UF	20.00%	50V
C630		1-123-024-21	ELECT	33UF		160V
C633		1-104-999-11	MYLAR	0.1UF	10.00%	200V
C634		1-126-933-11	ELECT	100UF	20.00%	16V
C635		1-104-665-11	ELECT	100UF	20.00%	10V
C636		1-104-760-51	CERAMIC CHIP	0.047UF	10.00%	50V
C639		1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C640		1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C641		1-102-002-00	CERAMIC	680PF	10.00%	500V
C642		1-126-943-11	ELECT	2200UF	20.00%	25V
C643		1-104-665-11	ELECT	100UF	20.00%	10V
C644		1-104-331-11	CERAMIC	0.0022UF	10.00%	1KV
C645		1-137-605-11	MYLAR	0.01UF	10.00%	250V
C646		1-107-679-91	ELECT	10UF	20.00%	450V
C647		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C649		1-126-940-11	ELECT	330UF	20.00%	25V
C650		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C651		1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C652		1-126-965-11	ELECT	22UF	20.00%	50V
C653		1-104-664-11	ELECT	47UF	20.00%	25V
C657		1-101-821-00	CERAMIC	0.0022UF		500V
C658		1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C901		1-136-153-00	MYLAR	0.01UF	5.00%	50V
C902		1-136-153-00	MYLAR	0.01UF	5.00%	50V
C905		1-125-805-91	ELECT	4.7UF	20.00%	50V
C906		1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C907		1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C908		1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C909		1-164-346-51	CERAMIC CHIP	1UF	10%	16V
C910		1-126-967-11	ELECT	47UF	20.00%	50V
C911		1-126-967-11	ELECT	47UF	20.00%	50V
C912		1-164-004-51	CERAMIC CHIP	0.1UF	10.00%	25V
C913		1-104-665-11	ELECT	100UF	20.00%	10V
C914		1-163-133-00	CERAMIC CHIP	470PF	10%	50V

REF. NO.		PART NO.	DESCRIPTION			REMARK
			<CONNECTOR>			
CN104		1-695-915-11	TAB (CONTACT)			
CN202	*	1-785-608-11	PIN, CONNECTOR 4P			
CN203	*	1-564-506-11	PLUG, CONNECTOR 3P			
CN204	*	1-564-506-11	PLUG, CONNECTOR 3P			
CN305	*	1-564-509-11	PLUG, CONNECTOR 6P			
CN505		1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P			
CN506		4-352-844-01	PIN, LEAD, COATING			
CN601	*	1-580-843-11	PIN, CONNECTOR (POWER)			
CN602	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P			
CN604	*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P			
CN901	*	1-564-507-11	PLUG, CONNECTOR 4P			
			<DIODE>			
D001		8-719-988-61	DIODE 1SS355TE-17			
D005		8-719-988-61	DIODE 1SS355TE-17			
D006		8-719-988-61	DIODE 1SS355TE-17			
D203		8-719-914-42	DIODE DA204K-T-146			
D300		1-216-295-61	SHORT CHIP	0		
D301		8-719-988-61	DIODE 1SS355TE-17			
D306		8-719-988-61	DIODE 1SS355TE-17			
D307		8-719-988-61	DIODE 1SS355TE-17			
D308		8-719-988-61	DIODE 1SS355TE-17			
D309		8-719-069-54	DIODE UDZS-TE17-5.1B			
D311		8-719-988-61	DIODE 1SS355TE-17			
D312		8-719-988-61	DIODE 1SS355TE-17			
D313		8-719-988-61	DIODE 1SS355TE-17			
D314		8-719-988-61	DIODE 1SS355TE-17			
D315		8-719-988-61	DIODE 1SS355TE-17			
D316		8-719-069-57	DIODE UDZS-TE17-6.8B			
D320		8-719-069-60	DIODE UDZS-TE17-9.1B			
D321		8-719-069-60	DIODE UDZS-TE17-9.1B			
D401		8-719-069-60	DIODE UDZS-TE17-9.1B			
D402		8-719-069-60	DIODE UDZS-TE17-9.1B			
D403		8-719-069-60	DIODE UDZS-TE17-9.1B			
D404		8-719-069-60	DIODE UDZS-TE17-9.1B			
D405		8-719-069-60	DIODE UDZS-TE17-9.1B			
D406		8-719-069-60	DIODE UDZS-TE17-9.1B			
D504		8-719-302-06	DIODE EU2-V1			
D504		8-719-302-43	DIODE RGP10GPKG23			
D505		8-719-988-61	DIODE 1SS355TE-17			
D506		8-719-911-19	DIODE 1SS119-25TD			
D507		8-719-988-61	DIODE 1SS355TE-17			
D508		8-719-988-61	DIODE 1SS355TE-17			
D509		1-216-073-61	RES-CHIP	10G	5%	1/10W
D510		8-719-988-61	DIODE 1SS355TE-17			
D511		8-719-988-61	DIODE 1SS355TE-17			
D512		8-719-988-61	DIODE 1SS355TE-17			
D513		8-719-908-03	DIODE GP08DPKG23			
D517		8-719-312-71	DIODE RS3FS			
D518		8-719-900-26	DIODE ERD29-08J			
D521		8-719-302-43	DIODE RGP10GPKG23			
D522		8-719-302-43	DIODE RGP10GPKG23			
D523		8-719-302-43	DIODE RGP10GPKG23			

http://cxema.ru

A

REF. NO.	PART NO.	DESCRIPTION	REMARK
D527	8-719-908-03	DIODE GP08DPKG23	
D528	8-719-908-03	DIODE GP08DPKG23	
D531	8-719-988-61	DIODE 1SS355TE-17	
D532	8-719-988-61	DIODE 1SS355TE-17	
D534	1-216-295-61	SHORT CHIP 0	
D602	8-719-911-19	DIODE 1SS119-25TD	
D603	8-719-150-92	DIODE RD33ES-T1B2	
D604	8-719-028-72	DIODE RGP02-17PKG23	
D605	8-719-510-53	DIODE D4SB60L	
D606	8-719-108-18	DIODE TF541M	
D607	8-719-016-74	DIODE 1SS352-TPH3	
D607	8-719-073-01	DIODE MA111-TX	
D608	8-719-110-53	DIODE RD20ES-T1B2	
D609	8-719-311-31	DIODE BYV26E/23	
D609	8-719-311-31	DIODE RU-1P	
D610	8-719-210-21	DIODE 11EQS04-NTA1B	
D611	8-719-046-74	DIODE AU-01Z-WS	
D613	8-719-046-74	DIODE AU-01Z-WS	
D614	8-719-046-74	DIODE AU-01Z-WS	
D618	8-719-067-18	DIODE RN4Z	
D620	8-719-110-72	DIODE RD30ES-T1B1	
D622	8-719-071-39	DIODE FMU-G26S	
D623	8-719-158-57	DIODE RD15SB2-T1	
D623	8-719-978-65	DIODE UDZ-TE-17-15B	
D624	8-719-073-01	DIODE MA111-TX	
D625	8-719-977-28	DIODE UDZS-TE17-10B	
D627	8-719-073-84	DIODE 31DQ06-FC5	
D628	8-719-911-19	DIODE 1SS119-25TD	
D631	8-719-068-00	DIODE ERC04-06SE	
D632	8-719-068-00	DIODE ERC04-06SE	
D633	8-719-948-45	DIODE ERA22-08TP3	
D634	8-719-073-01	DIODE MA111-TX	
D635	8-719-073-01	DIODE MA111-TX	
D636	8-719-510-02	DIODE D1NS4-TA2	
D637	8-719-109-96	DIODE RD6.8ES-T1B1	
D638	8-719-024-99	DIODE 11ES2-NTA2B	
D901	8-719-069-60	DIODE UDZS-TE17-9.1B	
D902	8-719-069-60	DIODE UDZS-TE17-9.1B	
D903	8-719-158-35	DIODE RD9.1SB-T1	
D904	8-719-069-60	DIODE UDZS-TE17-9.1B	
D905	8-719-069-60	DIODE UDZS-TE17-9.1B	
D906	8-719-045-19	DIODE SPB-26MVWF	
		<CONNECTOR>	
DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	
		<FERRITE BEAD>	
FB501	1-410-397-21	FERRITE 1.1UH	
FB502	1-410-397-21	FERRITE 1.1UH	
FB600	1-410-397-21	FERRITE 1.1UH	
FB601	1-410-397-21	FERRITE 1.1UH	
FB602	1-410-397-21	FERRITE 1.1UH	
FB603	1-410-397-21	FERRITE 1.1UH	
FB604	1-412-911-31	FERRITE 0UH	
FB607	1-410-397-21	FERRITE 1.1UH	
FB608	1-412-911-31	FERRITE 0UH	
FB611	1-410-397-21	FERRITE 1.1UH	
FB613	1-410-397-21	FERRITE 1.1UH	
FB615	1-410-397-21	FERRITE 1.1UH	
		<IC>	
IC001	8-752-906-20	IC CXP86449-622S	
IC002	8-759-371-21	IC MM1319AFBE	
IC003	8-759-370-34	IC AT24C08A-10PC-B	
IC003	8-759-527-71	IC M24C08-BN6	
IC201	8-759-339-60	IC TA8248K	
IC203	8-759-553-40	IC TDA7429S	
IC301	8-752-090-41	IC CXA2139S	
IC502	8-759-700-07	IC NJM2903M-TE2	
IC503	8-759-980-58	IC TDA8172	
IC601	8-749-013-75	IC STR-F6654	
IC602	8-749-920-61	IC SE-135N	
IC603	8-759-701-59	IC L7809CV	
IC604	8-759-231-53	IC L7805CV	
IC901	8-742-014-21	HYB IC SBX1981-51(21)	
		<JACK>	
J401	1-779-850-11	JACK BLOCK, PIN 6P	
J901	1-770-786-11	JACK	
J902	1-770-329-11	JACK, PIN 3P	
		<CHIP CONDUCTOR>	
JR001	1-216-295-61	SHORT CHIP 0	
JR002	1-216-295-61	SHORT CHIP 0	
JR003	1-216-295-61	SHORT CHIP 0	
JR004	1-216-295-61	SHORT CHIP 0	
JR005	1-216-295-61	SHORT CHIP 0	
JR006	1-216-295-61	SHORT CHIP 0	
JR007	1-216-295-61	SHORT CHIP 0	
JR008	1-216-295-61	SHORT CHIP 0	
JR009	1-216-295-61	SHORT CHIP 0	
JR010	1-216-295-61	SHORT CHIP 0	
JR011	1-216-295-61	SHORT CHIP 0	
JR012	1-216-295-61	SHORT CHIP 0	
JR013	1-216-295-61	SHORT CHIP 0	
JR014	1-216-295-61	SHORT CHIP 0	
JR015	1-216-295-61	SHORT CHIP 0	
JR016	1-216-295-61	SHORT CHIP 0	
JR018	1-216-295-61	SHORT CHIP 0	
JR019	1-216-295-61	SHORT CHIP 0	
JR102	1-216-295-61	SHORT CHIP 0	
JR109	1-216-295-61	SHORT CHIP 0	
JR202	1-216-295-61	SHORT CHIP 0	
JR301	1-216-295-61	SHORT CHIP 0	
JR303	1-216-295-61	SHORT CHIP 0	
JR401	1-216-295-61	SHORT CHIP 0	
JR403	1-216-295-61	SHORT CHIP 0	
JR404	1-216-295-61	SHORT CHIP 0	
JR405	1-216-295-61	SHORT CHIP 0	
JR500	1-216-295-61	SHORT CHIP 0	

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF. NO.	PART NO.	DESCRIPTION		REMARK
JR501	1-216-295-61	SHORT CHIP	0	
JR503	1-216-295-61	SHORT CHIP	0	
JR600	1-216-295-61	SHORT CHIP	0	
		<COIL>		
L002	1-414-856-11	INDUCTOR	10UH	
L003	1-414-180-11	INDUCTOR	3.3UH	
L005	1-414-233-22	INDUCTOR CHIP	0UH	
L101	1-414-856-11	INDUCTOR	10UH	
L102	1-414-856-11	INDUCTOR	10UH	
L103	1-414-856-11	INDUCTOR	10UH	
L104	1-414-856-11	INDUCTOR	10UH	
L105	1-414-856-11	INDUCTOR	10UH	
L204	1-414-856-11	INDUCTOR	10UH	
L301	1-414-189-31	INDUCTOR	100UH	
L302	1-414-185-41	INDUCTOR	22UH	
L501	1-412-525-31	INDUCTOR	10UH	
L502	1-422-613-11	COIL, AIR CORE		
L503	1-412-525-31	INDUCTOR	10UH	
L504	1-412-525-31	INDUCTOR	10UH	
L505	1-412-525-31	INDUCTOR	10UH	
L506	1-412-525-31	INDUCTOR	10UH	
L507	1-459-111-00	INDUCTOR	10MH	
L508	1-412-525-31	INDUCTOR	10UH	
L509	1-459-390-00	INDUCTOR	390UH	
L510	1-416-972-11	COIL, HORIZONTAL LINEARITY		
L512	1-412-549-31	INDUCTOR	1MH	
L513	1-412-549-31	INDUCTOR	1MH	
L515	1-459-104-00	COIL, WITH CORE		
L518	1-414-187-11	INDUCTOR	47UH	
L601	1-412-527-11	INDUCTOR	15UH	
L901	1-408-603-31	INDUCTOR	10UH	
L902	1-408-603-31	INDUCTOR	10UH	
L905	1-414-856-11	INDUCTOR	10UH	
		<PHOTO COUPLER>		
PH600 ⚠	8-749-924-35	PHOTO COUPLER ON3171-R		
		<IC LINK>		
PS200	1-532-675-21	LINK, IC 1.5A/150V		
		<TRANSISTOR>		
Q002	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q003	8-729-424-08	TRANSISTOR UN2111-TX		
Q004	8-729-421-22	TRANSISTOR UN2211-TX		
Q101	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q201	8-729-424-67	TRANSISTOR UN2216-TX		
Q202	8-729-424-67	TRANSISTOR UN2216-TX		
Q203	8-729-421-19	TRANSISTOR UN2213-TX		
Q204	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q205	8-729-421-19	TRANSISTOR UN2213-TX		
Q206	8-729-421-19	TRANSISTOR UN2213-TX		
Q207	8-729-421-19	TRANSISTOR UN2213-TX		
Q301	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q302	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q303	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q305	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q306	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q307	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q308	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q312	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q313	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q315	8-729-421-19	TRANSISTOR UN2213-TX		
Q401	8-729-424-67	TRANSISTOR UN2216-TX		
Q402	8-729-424-67	TRANSISTOR UN2216-TX		
Q403	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q404	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q503	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q505	8-729-931-45	TRANSISTOR IRF614-LF		
Q506	8-729-140-96	TRANSISTOR 2SC3209-L		
Q507	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L		
Q509	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q511	8-729-048-07	TRANSISTOR 2SD2578-CA		
Q601	8-729-023-22	TRANSISTOR 2SD2114KT146		
Q602	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q603	8-729-424-08	TRANSISTOR UN2111-TX		
Q604	8-729-200-17	TRANSISTOR 2SA1091R-TPE2		
Q605	8-729-044-30	TRANSISTOR 2SK2845-LB102		
Q606	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q607	8-729-922-37	TRANSISTOR 2SD2144S-TP-UVW		
Q608	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L		
Q901	8-729-421-19	TRANSISTOR UN2213-TX		
Q902	8-729-421-19	TRANSISTOR UN2213-TX		
		<RESISTOR>		
R001	1-414-233-22	INDUCTOR CHIP	0UH	
R002	1-216-025-61	RES-CHIP	100 5%	1/10W
R003	1-216-295-61	SHORT CHIP	0	
R004	1-216-025-61	RES-CHIP	100 5%	1/10W
R005	1-216-025-61	RES-CHIP	100 5%	1/10W
R007	1-216-295-61	SHORT CHIP	0	
R008	1-216-065-61	RES-CHIP	4.7K 5%	1/10W
R010	1-216-065-61	RES-CHIP	4.7K 5%	1/10W
R011	1-216-065-61	RES-CHIP	4.7K 5%	1/10W
R012	1-216-065-61	RES-CHIP	4.7K 5%	1/10W
R013	1-216-065-61	RES-CHIP	4.7K 5%	1/10W
R014	1-216-025-61	RES-CHIP	100 5%	1/10W
R015	1-216-025-61	RES-CHIP	100 5%	1/10W
R017	1-216-049-61	RES-CHIP	1K 5%	1/10W
R018	1-216-033-61	RES-CHIP	220 5%	1/10W
R019	1-216-073-61	RES-CHIP	10G 5%	1/10W
R021	1-216-073-61	RES-CHIP	10G 5%	1/10W
R022	1-216-033-61	RES-CHIP	220 5%	1/10W
R024	1-216-057-61	RES-CHIP	2.2K 5%	1/10W
R025	1-216-057-61	RES-CHIP	2.2K 5%	1/10W
R026	1-216-057-61	RES-CHIP	2.2K 5%	1/10W
R027	1-216-073-61	RES-CHIP	10G 5%	1/10W

http://cxema.ru

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
R029	1-216-049-61	RES-CHIP	1K	5%	1/10W
R031	1-216-049-61	RES-CHIP	1K	5%	1/10W
R035	1-216-025-61	RES-CHIP	100	5%	1/10W
R036	1-216-025-61	RES-CHIP	100	5%	1/10W
R037	1-216-025-61	RES-CHIP	100	5%	1/10W
R040	1-216-025-61	RES-CHIP	100	5%	1/10W
R041	1-216-025-61	RES-CHIP	100	5%	1/10W
R042	1-216-295-61	SHORT CHIP	0		
R043	1-216-049-61	RES-CHIP	1K	5%	1/10W
R044	1-216-025-61	RES-CHIP	100	5%	1/10W
R045	1-414-233-22	INDUCTOR CHIP	0UH		
R046	1-216-049-61	RES-CHIP	1K	5%	1/10W
R047	1-414-233-22	INDUCTOR CHIP	0UH		
R048	1-216-073-61	RES-CHIP	10G	5%	1/10W
R050	1-216-073-61	RES-CHIP	10G	5%	1/10W
R053	1-216-049-61	RES-CHIP	1K	5%	1/10W
R055	1-216-073-61	RES-CHIP	10G	5%	1/10W
R056	1-216-073-61	RES-CHIP	10G	5%	1/10W
R061	1-216-033-61	RES-CHIP	220	5%	1/10W
R062	1-216-041-61	RES-CHIP	470	5%	1/10W
R063	1-216-037-61	RES-CHIP	330	5%	1/10W
R064	1-216-037-61	RES-CHIP	330	5%	1/10W
R065	1-216-037-61	RES-CHIP	330	5%	1/10W
R066	1-216-049-61	RES-CHIP	1K	5%	1/10W
R067	1-216-049-61	RES-CHIP	1K	5%	1/10W
R105	1-216-295-61	SHORT CHIP	0		
R109	1-216-041-61	RES-CHIP	470	5%	1/10W
R111	1-216-025-61	RES-CHIP	100	5%	1/10W
R112	1-216-025-61	RES-CHIP	100	5%	1/10W
R113	1-216-047-00	METAL CHIP	820	5%	1/10W
R202	1-216-077-61	RES, CHIP	15K		(2012)
R203	1-216-073-61	RES-CHIP	10G	5%	1/10W
R204	1-216-077-61	RES, CHIP	15K		(2012)
R205	1-216-077-61	RES, CHIP	15K		(2012)
R206	1-216-073-61	RES-CHIP	10G	5%	1/10W
R207	1-216-077-61	RES, CHIP	15K		(2012)
R208	1-216-077-61	RES, CHIP	15K		(2012)
R209	1-216-077-61	RES, CHIP	15K		(2012)
R211	1-216-033-61	RES-CHIP	220	5%	1/10W
R212	1-216-033-61	RES-CHIP	220	5%	1/10W
R213	1-216-073-61	RES-CHIP	10G	5%	1/10W
R214	1-216-073-61	RES-CHIP	10G	5%	1/10W
R215	1-216-059-61	RES-CHIP	2.7K	5%	1/10W
R216	1-216-059-61	RES-CHIP	2.7K	5%	1/10W
R217	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R218	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R219	1-216-025-61	RES-CHIP	100	5%	1/10W
R220	1-216-025-61	RES-CHIP	100	5%	1/10W
R221	1-216-295-61	SHORT CHIP	0		
R222	1-216-295-61	SHORT CHIP	0		
R225	1-216-033-61	RES-CHIP	220	5%	1/10W
R226	1-216-033-61	RES-CHIP	220	5%	1/10W
R227	1-216-033-61	RES-CHIP	220	5%	1/10W
R228	1-249-389-11	CARBON	4.7	5%	1/4W
R229	1-216-073-61	RES-CHIP	10G	5%	1/10W
R230	1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R231	1-216-295-61	SHORT CHIP	0		
R234	1-249-389-11	CARBON	4.7	5%	1/4W

REF. NO.	PART NO.	DESCRIPTION			REMARK
R235	1-216-069-61	RES-CHIP	6.8K	5%	1/10W
R236	1-216-069-61	RES-CHIP	6.8K	5%	1/10W
R237	1-216-308-61	METAL CHIP	4.7	5%	1/10W
R301	1-216-071-61	RES-CHIP	8.2K	5%	1/10W
R302	1-216-295-61	SHORT CHIP	0		
R303	1-216-049-61	RES-CHIP	1K	5%	1/10W
R304	1-216-073-61	RES-CHIP	10G	5%	1/10W
R305	1-216-051-61	RES-CHIP	1.2K	5%	1/10W
R306	1-216-073-61	RES-CHIP	10G	5%	1/10W
R308	1-216-025-61	RES-CHIP	100	5%	1/10W
R309	1-216-025-61	RES-CHIP	100	5%	1/10W
R310	1-216-025-61	RES-CHIP	100	5%	1/10W
R311	1-216-017-61	RES-CHIP	47	5%	1/10W
R312	1-216-041-61	RES-CHIP	470	5%	1/10W
R313	1-216-053-61	RES-CHIP	1.5K	5%	1/10W
R314	1-216-045-00	METAL CHIP	680	5%	1/10W
R316	1-216-053-61	RES-CHIP	1.5K	5%	1/10W
R317	1-216-077-61	RES, CHIP	15K		(2012)
R318	1-216-051-61	RES-CHIP	1.2K	5%	1/10W
R319	1-216-025-61	RES-CHIP	100	5%	1/10W
R320	1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R321	1-216-073-61	RES-CHIP	10G	5%	1/10W
R322	1-216-033-61	RES-CHIP	220	5%	1/10W
R331	1-216-295-61	SHORT CHIP	0		
R332	1-216-033-61	RES-CHIP	220	5%	1/10W
R333	1-216-073-61	RES-CHIP	10G	5%	1/10W
R334	1-216-129-61	METAL CHIP	2.2M	5%	1/10W
R335	1-216-045-00	METAL CHIP	680	5%	1/10W
R338	1-216-033-61	RES-CHIP	220	5%	1/10W
R340	1-216-025-61	RES-CHIP	100	5%	1/10W
R345	1-216-081-61	RES-CHIP	22K	5%	1/10W
R348	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R349	1-216-073-61	RES-CHIP	10G	5%	1/10W
R350	1-216-061-61	RES-CHIP	3.3G	5%	1/10W
R351	1-216-053-61	RES-CHIP	1.5K	5%	1/10W
R354	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R355	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R356	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R357	1-216-079-00	METAL CHIP	18K	5%	1/10W
R358	1-216-049-61	RES-CHIP	1K	5%	1/10W
R359	1-216-033-61	RES-CHIP	220	5%	1/10W
R360	1-216-033-61	RES-CHIP	220	5%	1/10W
R361	1-216-073-61	RES-CHIP	10G	5%	1/10W
R362	1-216-075-61	RES-CHIP	12K	5%	1/10W
R363	1-216-079-00	METAL CHIP	18K	5%	1/10W
R364	1-216-295-61	SHORT CHIP	0		
R365	1-216-033-61	RES-CHIP	220	5%	1/10W
R366	1-216-073-61	RES-CHIP	10G	5%	1/10W
R367	1-216-073-61	RES-CHIP	10G	5%	1/10W
R370	1-216-033-61	RES-CHIP	220	5%	1/10W
R376	1-216-081-61	RES-CHIP	22K	5%	1/10W
R377	1-216-121-61	RES-CHIP	1M	5%	1/10W
R378	1-216-031-61	RES-CHIP	180	5%	1/10W
R401	1-216-049-61	RES-CHIP	1K	5%	1/10W
R402	1-216-073-61	RES-CHIP	10G	5%	1/10W
R403	1-216-073-61	RES-CHIP	10G	5%	1/10W
R404	1-216-073-61	RES-CHIP	10G	5%	1/10W
R405	1-216-049-61	RES-CHIP	1K	5%	1/10W

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
R406	1-216-073-61	RES-CHIP	10G	5%	1/10W
R407	1-216-049-61	RES-CHIP	1K	5%	1/10W
R408	1-216-049-61	RES-CHIP	1K	5%	1/10W
R409	1-216-041-61	RES-CHIP	470	5%	1/10W
R410	1-216-113-61	RES-CHIP	470K	5%	1/10W
R411	1-216-113-61	RES-CHIP	470K	5%	1/10W
R412	1-216-041-61	RES-CHIP	470	5%	1/10W
R413	1-216-021-61	RES-CHIP	68	5%	1/10W
R414	1-216-113-61	RES-CHIP	470K	5%	1/10W
R415	1-216-113-61	RES-CHIP	470K	5%	1/10W
R416	1-216-077-61	RES, CHIP	15K		(2012)
R417	1-216-077-61	RES, CHIP	15K		(2012)
R418	1-216-113-61	RES-CHIP	470K	5%	1/10W
R419	1-216-022-00	METAL CHIP	75	5%	1/10W
R426	1-216-033-61	RES-CHIP	220	5%	1/10W
R505	1-216-099-61	RES-CHIP	120K	5%	1/10W
R506	1-216-085-00	METAL CHIP	33K	5%	1/10W
R507	1-249-389-11	CARBON	4.7	5%	1/4W
R508	1-215-910-00	METAL OXIDE	68	5%	3W
R509	1-215-911-11	METAL OXIDE	100	5%	3W
R510	1-215-885-00	METAL OXIDE	68	5%	2W
R511	1-215-911-11	METAL OXIDE	100	5%	3W
R516	1-216-081-61	RES-CHIP	22K	5%	1/10W
R518	1-220-948-91	METAL	100	5%	1/2W
R520	1-215-445-00	METAL	10K	1%	1/4W
R522	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R523	1-220-952-91	METAL MELF	330	5%	1/2W
R525	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R526	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R527	1-216-001-61	RES-CHIP	10	5%	1/10W
R528	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R529	1-208-766-11	METAL CHIP	220	0.5%	1/10W
R531	1-220-963-91	METAL MELF	3.3K	5%	1/2W
R533	1-220-958-91	RES, METAL FILM	1K		
R534	1-216-361-00	METAL OXIDE	0.22	5%	2W
R535	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R536	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R537	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R540	1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R541	1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R542	1-216-295-61	SHORT CHIP	0		
R543	1-249-426-11	CARBON	5.6K	5%	1/4W
R544	1-216-457-00	METAL OXIDE	1.2K	5%	2W
R545	1-216-077-61	RES, CHIP	15K		(2012)
R546	1-216-077-61	RES, CHIP	15K		(2012)
R547	1-216-085-00	METAL CHIP	33K	5%	1/10W
R549	1-215-451-00	METAL	18K	1%	1/4W
R550	1-216-097-61	RES-CHIP	100K	5%	1/10W
R551	1-220-961-91	METAL CHIP	2.2K	5%	1/2W
R552	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R553	1-215-457-00	METAL	33K	1%	1/4W
R554	1-215-457-00	METAL	33K	1%	1/4W
R556	1-215-437-00	METAL	4.7K	1%	1/4W
R558	1-220-961-91	METAL CHIP	2.2K	5%	1/2W
R559	1-220-969-91	METAL CHIP	10K	5%	1/2W
R560	1-216-073-61	RES-CHIP	10G	5%	1/10W
R562	1-249-401-11	CARBON	47	5%	1/4W

REF. NO.	PART NO.	DESCRIPTION			REMARK
R565	1-216-073-61	RES-CHIP	10G	5%	1/10W
R567	1-216-105-61	METAL CHIP	220K	5%	1/10W
R568	1-249-383-11	CARBON	1.5	5%	1/4W
R570	1-216-069-61	RES-CHIP	6.8K	5%	1/10W
R571	1-215-437-00	METAL	4.7K	1%	1/4W
R573	1-216-089-61	RES, CHIP	47K		(2012)
R577	1-215-913-11	METAL OXIDE	220	5%	3W
R578	1-216-369-00	METAL OXIDE	1	5%	2W
R579	1-216-097-61	RES-CHIP	100K	5%	1/10W
R580	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R581	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R585	1-249-391-11	CARBON	6.8	5%	1/4W
R588	1-215-888-00	METAL OXIDE	220	5%	2W
R589	1-215-888-00	METAL OXIDE	220	5%	2W
R590	1-215-465-00	METAL	68K	1%	1/4W
R591	1-260-288-11	CARBON	0.47	5%	1/2W
R593	1-260-288-11	CARBON	0.47	5%	1/2W
R594	1-260-288-11	CARBON	0.47	5%	1/2W
R596	1-216-485-11	METAL OXIDE	5.6K	5%	3W
R597	1-247-750-11	CARBON	680	5%	1/2W
R598	1-220-976-91	METAL MELF	56K	5%	1/2W
R599	1-249-389-11	CARBON	4.7	5%	1/4W
R600	1-220-976-91	METAL MELF	56K	5%	1/2W
R601	1-249-418-11	CARBON	1.2K	5%	1/4W
R602	1-249-389-11	CARBON	4.7	5%	1/4W
R603	1-215-485-00	METAL	470K	1%	1/4W
R604	1-216-097-61	RES-CHIP	100K	5%	1/10W
R607	1-220-965-91	METAL CHIP	4.7K	5%	1/2W
R608	1-240-205-91	CARBON	22M	5%	1/2W
R609	1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R610	1-216-073-61	RES-CHIP	10G	5%	1/10W
R611	1-216-089-61	RES, CHIP	47K		(2012)
R612	1-216-045-00	METAL CHIP	680	5%	1/10W
R614	1-216-041-61	RES-CHIP	470	5%	1/10W
R615	1-216-350-11	METAL OXIDE	1.2	5%	1W
R616	1-260-302-51	CARBON	6.8	5%	1/2W
R617	1-247-791-91	CARBON	22	5%	1/4W
R619	1-260-128-11	CARBON	270K	5%	1/2W
R620	1-215-915-11	METAL OXIDE	470	5%	3W
R622	1-215-908-00	METAL OXIDE	33	5%	3W
R623	1-216-095-61	RES-CHIP	82K	5%	1/10W
R624	1-216-089-61	RES, CHIP	47K		(2012)
R626	1-216-049-61	RES-CHIP	1K	5%	1/10W
R627	1-240-251-11	CMT-MELF	6.8	5%	10W
R629	1-247-747-11	CARBON	470	5%	1/2W
R630	1-249-429-11	CARBON	10K	5%	1/4W
R631	1-216-089-61	RES, CHIP	47K		(2012)
R632	1-202-933-61	FUSIBLE	0.1	10%	1/2W
R634	⚠ 1-218-265-11	METAL	8.2M	5%	1W
R635	1-216-492-11	METAL OXIDE	82K	5%	3W
R636	1-215-924-00	METAL OXIDE	15K	5%	3W
R637	1-216-492-11	METAL OXIDE	82K	5%	3W
R639	1-216-363-00	METAL OXIDE	0.33	5%	2W
R640	1-220-956-91	METAL MELF	680	5%	1/2W
R641	1-216-362-11	METAL OXIDE	0.27	5%	2W
R642	1-220-959-91	METAL MELF	1.5K	5%	1/2W
R643	1-220-963-91	METAL MELF	3.3K	5%	1/2W

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A **C3**

REF. NO.		PART NO.	DESCRIPTION			REMARK
R644		1-220-959-91	METAL MELF	1.5K	5%	1/2W
R646		1-215-924-00	METAL OXIDE	15K	5%	3W
R647		1-249-401-11	CARBON	47	5%	1/4W
R648		1-216-057-61	RES-CHIP	2.2K	5%	1/10W
R649		1-220-958-91	RES, METAL FILM	1K		
R650		1-215-882-00	METAL OXIDE	22	5%	2W
R652		1-215-900-11	METAL OXIDE	22K	5%	2W
R653		1-215-873-00	METAL OXIDE	4.7K	5%	1W
R657		1-260-127-11	CARBON	220K	5%	1/2W
R659		1-216-049-61	RES-CHIP	1K	5%	1/10W
R660		1-216-073-61	RES-CHIP	10G	5%	1/10W
R661		1-215-873-00	METAL OXIDE	4.7K	5%	1W
R901		1-220-952-91	METAL MELF	330	5%	1/2W
R902		1-220-952-91	METAL MELF	330	5%	1/2W
R903		1-216-022-00	METAL CHIP	75	5%	1/10W
R904		1-216-033-61	RES-CHIP	220	5%	1/10W
R905		1-216-113-61	RES-CHIP	470K	5%	1/10W
R906		1-216-077-61	RES, CHIP	15K	(2012)	
R907		1-216-113-61	RES-CHIP	470K	5%	1/10W
R908		1-216-077-61	RES, CHIP	15K	(2012)	
R909		1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R910		1-216-065-61	RES-CHIP	4.7K	5%	1/10W
R911		1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R912		1-216-041-61	RES-CHIP	470	5%	1/10W
R913		1-216-049-61	RES-CHIP	1K	5%	1/10W
R914		1-216-055-61	RES-CHIP	1.8K	5%	1/10W
R915		1-216-061-61	RES-CHIP	3.3G	5%	1/10W
R916		1-216-017-61	RES-CHIP	47	5%	1/10W
R917		1-216-041-61	RES-CHIP	470	5%	1/10W
R918		1-216-041-61	RES-CHIP	470	5%	1/10W
			<RELAY>			
RY601	⚠	1-755-299-11	RELAY			
			<SWITCH>			
S502		1-572-707-11	SWITCH, LEVER			
S600	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)			
S901		1-692-431-21	SWITCH, TACTILE			
S902		1-692-431-21	SWITCH, TACTILE			
S903		1-692-431-21	SWITCH, TACTILE			
S904		1-692-431-21	SWITCH, TACTILE			
S905		1-692-431-21	SWITCH, TACTILE			
S906		1-692-431-21	SWITCH, TACTILE			
S907		1-692-431-21	SWITCH, TACTILE			
			<TRANSFORMER>			
T501		1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE			
T503	⚠	8-598-838-00	FBT ASSY, NX-1748			
T601		1-424-682-11	TRANSFORMER, LINE FILTER			
T603	⚠	1-433-512-31	TRANSFORMER, CONVERTER (SRT)			
T604	⚠	1-431-852-11	TRANSFORMER, CONVERTER (SRT)			

REF. NO.		PART NO.	DESCRIPTION			REMARK
			<THERMISTOR>			
THP600		1-810-961-11	THERMISTOR, POSITIVE			
			<TUNER>			
TU101		8-598-449-10	TUNER, FSS BTF-LG433			
			<CRYSTAL>			
X001		1-579-125-11	VIBRATOR, CERAMIC			
X301		1-781-134-21	VIBRATOR, CRYSTAL			
X302		1-781-132-21	VIBRATOR, CRYSTAL			
**********						
	*	A-1332-056-A	C3 BOARD MOUNTED			
			**********			
		7-682-948-01	SCREW +PSW 3X8			
			<CAPACITOR>			
C701		1-162-114-00	CERAMIC	0.0047UF		2KV
C702		1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C703		1-107-651-11	ELECT	4.7UF	20.00%	250V
C704		1-130-202-00	FILM	0.022UF	5.00%	400V
C706		1-104-664-11	ELECT	47UF	20.00%	16V
C708		1-102-114-00	CERAMIC	470PF	10.00%	50V
C709		1-102-114-00	CERAMIC	470PF	10.00%	50V
C710		1-102-114-00	CERAMIC	470PF	10.00%	50V
C712		1-102-116-00	CERAMIC	680PF	10.00%	50V
C713		1-102-116-00	CERAMIC	680PF	10.00%	50V
C714		1-102-116-00	CERAMIC	680PF	10.00%	50V
C716		1-126-933-11	ELECT	100UF	20.00%	16V
C717		1-101-880-00	CERAMIC	47PF	5.00%	50V
C736		1-102-114-00	CERAMIC	470PF	10.00%	50V
C737		1-102-114-00	CERAMIC	470PF	10.00%	50V
C746		1-102-114-00	CERAMIC	470PF	10.00%	50V
			<CONNECTOR>			
CN701		1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P			
CN702		1-695-915-11	TAB (CONTACT)			
CN703	*	1-564-509-11	PLUG, CONNECTOR 6P			
CN704		1-695-915-11	TAB (CONTACT)			
			<DIODE>			
D701		8-719-911-19	DIODE 1SS119-25TD			
D702		8-719-911-19	DIODE 1SS119-25TD			
D703		8-719-911-19	DIODE 1SS119-25TD			
D707		8-719-911-19	DIODE 1SS119-25TD			
D708		8-719-911-19	DIODE 1SS119-25TD			

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

C3 F

REF. NO.		PART NO.	DESCRIPTION			REMARK
D709		8-719-911-19	DIODE 1SS119-25TD			
D710		8-719-911-19	DIODE 1SS119-25TD			
D711		8-719-911-19	DIODE 1SS119-25TD			
D712		8-719-911-19	DIODE 1SS119-25TD			
D713		8-719-911-19	DIODE 1SS119-25TD			
D714		8-719-911-19	DIODE 1SS119-25TD			
D715		8-719-911-19	DIODE 1SS119-25TD			
D716		8-719-911-19	DIODE 1SS119-25TD			
D717		8-719-121-26	DIODE RD9.1ES-T1B			
			<JACK>			
J701	⚠	1-540-071-22	SOCKET, CRT			
			<COIL>			
L701		1-410-667-31	INDUCTOR	22UH		
L710		1-408-613-31	INDUCTOR	68UH		
L711		1-408-613-31	INDUCTOR	68UH		
L712		1-408-613-31	INDUCTOR	68UH		
			<TRANSISTOR>			
Q704		8-729-326-11	TRANSISTOR 2SC3271F-N			
Q705		8-729-326-11	TRANSISTOR 2SC3271F-N			
Q706		8-729-326-11	TRANSISTOR 2SC3271F-N			
Q707		8-729-200-17	TRANSISTOR 2SA1091O-TPE2			
Q708		8-729-200-17	TRANSISTOR 2SA1091O-TPE2			
Q709		8-729-200-17	TRANSISTOR 2SA1091O-TPE2			
Q710		8-729-119-78	TRANSISTOR 2SC2785TP-HFE			
Q711		8-729-119-78	TRANSISTOR 2SC2785TP-HFE			
Q712		8-729-119-78	TRANSISTOR 2SC2785TP-HFE			
			<RESISTOR>			
R703		1-249-496-11	CARBON	100K	5%	1/2W
R705		1-216-380-11	METAL OXIDE	8.2	5%	2W
R706		1-215-417-00	METAL	680	1%	1/4W
R707		1-215-413-00	METAL	470	1%	1/4W
R708		1-216-379-11	METAL OXIDE	6.8	5%	2W
R710		1-215-922-11	METAL OXIDE	6.8K	5%	3W
R711		1-247-752-11	CARBON	1K	5%	1/2W
R712		1-215-922-11	METAL OXIDE	6.8K	5%	3W
R713		1-247-752-11	CARBON	1K	5%	1/2W
R714		1-215-922-11	METAL OXIDE	6.8K	5%	3W
R715		1-247-752-11	CARBON	1K	5%	1/2W
R719		1-215-480-00	METAL	300K	1%	1/4W
R720		1-249-923-11	CARBON	1K	5%	1/4W
R721		1-215-489-00	METAL	680K	1%	1/4W
R722		1-249-923-11	CARBON	1K	5%	1/4W
R723		1-215-479-00	METAL	270K	1%	1/4W
R724		1-249-923-11	CARBON	1K	5%	1/4W
R725		1-220-961-91	METAL CHIP	2.2K	5%	1/2W
R726		1-220-961-91	METAL CHIP	2.2K	5%	1/2W
R727		1-220-961-91	METAL CHIP	2.2K	5%	1/2W
R728		1-220-949-91	METAL MELF	150	5%	1/2W
R729		1-220-949-91	METAL MELF	150	5%	1/2W

REF. NO.		PART NO.	DESCRIPTION			REMARK
R730		1-220-949-91	METAL MELF	150	5%	1/2W
R731		1-220-949-91	METAL MELF	150	5%	1/2W
R732		1-220-949-91	METAL MELF	150	5%	1/2W
R733		1-249-406-11	CARBON	120	5%	1/4W
R734		1-247-739-11	CARBON	100	5%	1/2W
R738		1-220-948-91	METAL	100	5%	1/2W
R739		1-220-948-91	METAL	100	5%	1/2W
R740		1-220-948-91	METAL	100	5%	1/2W
R755		1-249-418-11	CARBON	1.2K	5%	1/4W
R756		1-249-418-11	CARBON	1.2K	5%	1/4W
R757		1-249-418-11	CARBON	1.2K	5%	1/4W
			<VARIABLE RESISTOR>			
RV702		1-241-656-11	RES, ADJ, METAL FILM 110M			
**********						
	*	A-1241-372-A	F BOARD MOUNTED			
			**********			
		1-533-223-11	HOLDER, FUSE			
	*	4-374-846-01	COVER, CAPACITOR, CAP TYPE			
			<CAPACITOR>			
C654	⚠	1-117-703-11	CERAMIC	0.0047UF	99%	250V
C4602	⚠	1-104-708-11	MYLAR	0.47UF	20.00%	250V
			<CONNECTOR>			
CN4601	*	1-580-843-11	PIN, CONNECTOR (POWER)			
CN4602	*	1-580-843-11	PIN, CONNECTOR (POWER)			
CN4603		1-695-915-11	TAB (CONTACT)			
			<FUSE>			
F4601	⚠	1-532-237-00	FUSE, TIME-LAG (BET) 3.15A/250V			
			<RESISTOR>			
R4601	⚠	1-202-719-00	SOLID	1M	10%	1/2W
			<TRANSFORMER>			
T4601		1-431-747-11	TRANSFORMER, LINE FILTER			
			<VARISTOR>			
VDR461		1-803-830-11	VARISTOR (ERZV14D621)			
**********						

http://cxema.ru

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
		MISCELLANEOUS	
		**********	
⚠	1-416-946-11	COIL, DEMAGNETIC	
	1-452-032-00	MAGNET,DISC	
⚠	1-540-005-31	CAP ASSY, HIGH VOLTAGE	
	1-505-740-11	SPEAKER (5X9CM)	
⚠	1-574-062-11	CORD, POWER (WITH CONNECTOR) 2.5A/250V	
	1-900-212-58	LEAD ASSY, FOCUS	
	1-900-701-49	LEAD ASSY, G2	
	8-451-505-11	DEFLECTION YOKE (Y21RSA-S)	
⚠	8-738-809-05	PICTURE TUBE (A51LPT70X)	

****

REF. NO.	PART NO.	DESCRIPTION	REMARK
		ACCESSORIES AND PACKING MATERIAL	
		**********	
*	4-053-003-01	BAG, PROTECTION	
*	4-075-760-01	INDIVIDUAL CARTON	
*	4-075-761-01	CUSHION (UPPER)(ASSY)	
*	4-075-762-01	CUSHION (LOWER)(ASSY)	
	3-866-882-11	MANUAL, INSTRUCTION	
	4-392-003-31	BAND, HOLD	
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)	
	4-392-004-21	CLIP	

****

		REMOTE COMMANDER	
		**********	
	1-418-163-11	REMOTE COMMANDER (RM-952)	
	9-939-697-01	BATTERY COVER, REMOTE COMMANDER (RM-952)	

9-965-796-01

Sony Corporation
Sony Technology Malaysia Sdn. Bhd.
TV Business of General Area

English
2000BS70034-1
Printed in Malaysia
© 2000.2

http://cxema.ru